

KICKASS



**ULTRA ZOOM 1000 LED TORCH FLASHLIGHT
WATERPROOF WITH POWER BANK**

OWNER'S MANUAL

KATORCHFLUB

VER 1.2

SAFETY NOTES

- This flashlight is not a toy. Keep it out of reach of children and do not allow unsupervised use.
- Do not use the flashlight near flammable materials, gases, or open flames.
- Only use the accessories and charging cables provided with your flashlight. Do not use non-original parts.
- Do not shine the light directly into the eyes of people or animals, especially in high-brightness modes, as it may cause eye injury.
- Regularly inspect the charging cable for damage. Do not use damaged cables.
- Inspect the flashlight for any visible damage before each use. If any issues are found, do not use the device and contact KickAss Products support.
- The surface of the light may become hot when in use. Avoid touching the lens.
- Never expose the battery to fire, short circuits, strong impacts, or punctures, as this may cause fire or explosion.
- Always turn off the flashlight when not in use to conserve battery.
- Charge the flashlight fully before first use to ensure optimal battery performance.
- Only charge in well-ventilated areas. Avoid charging in extreme temperatures to prevent overheating or battery damage.
- If the flashlight is not used regularly, fully charge it at least once every three months to help maintain battery health and extend its lifespan.
- Strobe or flashing light may trigger seizures in individuals with photosensitive epilepsy. Use with caution around those at risk.
- Ensure the battery cap is securely tightened to prevent the battery from coming loose or falling out during use.
- Always insert the battery with the correct polarity; incorrect installation will prevent the flashlight from operating.

TABLE OF CONTENTS

SAFETY NOTES -----	2
SPECIFICATIONS -----	4
INCLUDED COMPONENTS -----	5
PRODUCT FEATURES -----	6
PRODUCT OVERVIEW -----	7
CHARGING THE FLASHLIGHT -----	8
USING THE FLASHLIGHT -----	9
OPERATING THE FLASHLIGHT -----	9
ADJUSTING THE LIGHT BEAM FOCUS -----	9
USING THE POWER BANK FUNCTION -----	10
TROUBLESHOOTING -----	11
CLEANING INSTRUCTIONS -----	12
WARRANTY & SUPPORT INFORMATION -----	12

SPECIFICATIONS



PRODUCT DIMENSIONS	295 x 65 mm (LW)
PRODUCT WEIGHT	0.9 kg
BATTERY CAPACITY	10000mAh 3.7V
USB-C INPUT	5V/2A 10W
USB-A OUTPUT	5V/1A 5W
STANDBY CURRENT	59.8 μ A
RUN TIME	Turbo mode: 30 seconds High mode: up to 4 hours 27 minutes Medium mode: up to 7 hours Low mode: up to 17 hours 36 minutes
CHARGING TIME	Approximately 5 hours 30 minutes
LIGHT MAXIMUM DISTANCE	Up to 1000 meters
UNDER-VOLTAGE PROTECTION	1.983V
OVER-CURRENT PROTECTION	1.27A
IP RATING	IPX7

INCLUDED COMPONENTS



LANYARD

TORCH



USB-C CABLE

PRODUCT FEATURES


- Shines up to 1000 meters, offering strong long-distance visibility for hiking, hunting, emergency situations and other outdoor activities.
- An adjustable focus function lets you adjust the beam from a wide flood light to a focused spotlight, depending on your needs.
- Delivers up to 1000 lumens of bright, clear light, ideal for lighting up large areas or cutting through darkness.
- Includes four brightness levels so you can choose the right intensity for any task or setting.
- Features a fast-flashing strobe mode for emergency signaling or attracting attention.
- Runs up to 17 hours on a full charge, providing extended use without needing to recharge frequently.
- Built-in 10,000mAh power bank allows you to charge USB devices on the go using the integrated USB-A port.
- Durable, waterproof aluminium body is designed to withstand rough outdoor conditions and bad weather.
- Charges via USB-C for quick, convenient power without disposable batteries.

PRODUCT OVERVIEW



CHARGING THE FLASHLIGHT

- Using the included charging cable, connect the USB-C end to the flashlight's charging port and the other end to a reliable power source such as a power bank, wall adapter, or car charger.
- The battery indicator will turn red once charging begins.
- When fully charged, the charging indicator will turn green.
- Unplug the charging cable from the flashlight.

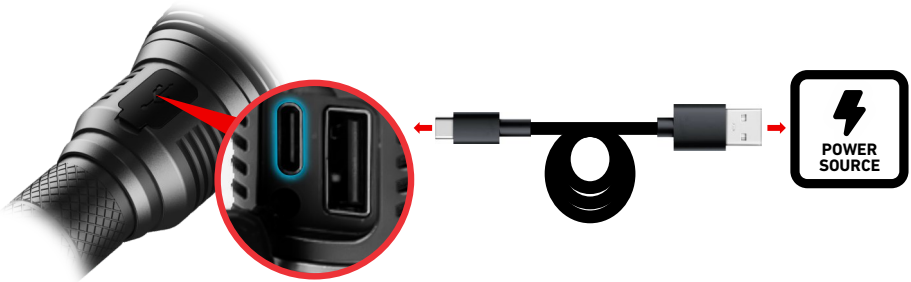

- **Note:**
- If the flashlight is not used frequently, make sure to fully charge it every three months to help prolong battery life.
- The USB-A port provides up to 5V/1A output. Charging devices with a higher max input rating may result in longer charging time.

USING THE FLASHLIGHT

OPERATING THE FLASHLIGHT

Note: Please fully charge the flashlight before first use.




- Pressing the POWER/LIGHT MODE button will cycle through the following:
Power OFF ▶ ON/High Brightness ▶ Medium Brightness ▶ Low Brightness ▶ Power OFF
- To activate the strobe mode (fast flashing) when the torch is off, quickly double press the POWER button. Press the POWER button once to exit strobe mode.
- To activate turbo mode (1000 lumens) from any state, whether the flashlight is off or already on, long press the POWER button for two seconds.
- Press the POWER button again to exit turbo mode. The flashlight will return to the previously used brightness setting.

Note:

- Turbo mode has a maximum runtime of 30 seconds. After this, the flashlight will automatically return to the previous mode.
- Using turbo mode consumes a significant amount of power and can rapidly drain the battery.

ADJUSTING THE LIGHT BEAM FOCUS

- To narrow the beam and focus on a central spot, hold the flashlight body and twist the head counterclockwise.
- To widen the beam for broader coverage, hold the flashlight body and twist the head clockwise.

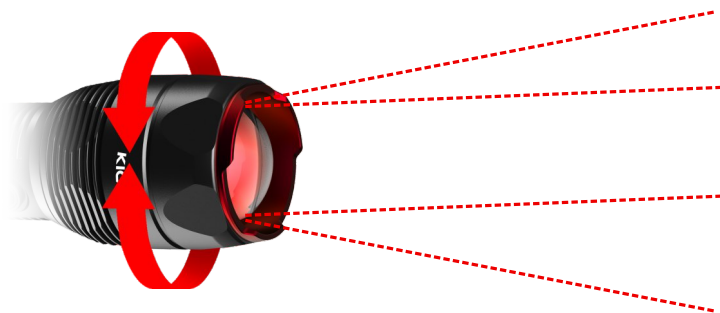

USING THE POWER BANK FUNCTION

- Use a charging cable compatible with your device that has a USB-A connector on one end. Connect the cable to your device.
- Locate the USB-A charging port on the flashlight, covered by a rubber cap.
- Plug the USB-A end of the cable into the flashlight's port to begin charging.



TROUBLESHOOTING

The flashlight won't turn on.	<ul style="list-style-type: none">• Press the POWER button and check if the button LED lights up green. If the LED does not light, the unit is flat. Please charge the flashlight.
The flashlight won't charge.	<ul style="list-style-type: none">• Check if the charging indicator lights up when the light is plugged in. If not, there may be an issue with a connection, charging cable, or power source.• Ensure the charging cable is securely connected to both the light and a working power source.• Check the condition of the charging cable for any visible damage such as frayed wires or loose fittings, as this may prevent proper charging. If any damage is found, try using a different cable.
Brightness changed unexpectedly, despite no buttons being pressed.	<ul style="list-style-type: none">• Turbo mode may have been activated accidentally by pressing and holding the power button for 2 seconds. In this mode, the light will automatically return to the previously selected setting after 30 seconds.• When using the flashlight, ensure the POWER button is not exposed to accidental presses to avoid unintended mode changes.
The connected device is charging slowly.	<ul style="list-style-type: none">• The flashlight's USB output provides 5W (5V/1A) of power. Devices that require higher input for fast charging may experience slower charging speeds when using this output.
The battery is running out faster than expected.	<ul style="list-style-type: none">• Using the flashlight at higher brightness level while a device is connected for charging will drain the battery faster. For maximum run time, use the flashlight at low brightness when possible.• Ambient temperature and humidity can affect battery efficiency; hot conditions may reduce performance.• Make sure the flashlight is fully charged before use; partial charges may reduce runtime.

CLEANING INSTRUCTIONS

- Do not use sharp or hard objects to clean the flashlight, as they may cause scratches or damage.
- Always turn off the flashlight and disconnect it from any power source before cleaning.
- Avoid cleaning the flashlight while it is charging or in a humid environment to prevent electrical hazards.
- Take care not to scratch the lens. Use a soft, non-abrasive cloth for cleaning.
- Do not use abrasive cleaners, solvents, or corrosive chemicals, as these can damage the surface or internal components.
- Wipe the flashlight with a soft, damp cloth. Do not immerse in water or use running water to clean. Avoid harsh chemicals or abrasive materials.

WARRANTY & SUPPORT INFORMATION

Need help? For product support or to make a warranty claim, reach out to the KickAss Customer Service team on: warranty@kickassproducts.com.au

Alternatively, visit our Customer Support Portal at:
<https://supportportal.kickassproducts.com.au/>

KICKASS

**KickAss is a registered trademark of
KickAss Products Pty Ltd**

**Designed & imported by
KickAss Products Pty Ltd
39 Iris Place, Acacia Ridge, QLD 4110
Australia**

Made in China

