



50CM PORTABLE ELECTRIC BBQ - 1400W

OWNER'S MANUAL

SAFETY INFORMATION

Safety Notes

- If the ceramic cooking surface cracks, switch off the BBQ immediately and contact customer support. Do not use until inspected.
- The surface of the BBQ will become extremely hot during use and will retain heat after use. It can cause burns – be careful.
- Never leave the BBQ unattended while in use.
- Do not use the BBQ for any purpose other than cooking food.
- Only responsible adults should use this BBQ. Children or pets must never be left unsupervised around the BBQ.
- Do not move the BBQ while it is in use. Always switch off and disconnect from the power supply before removing or moving the docking unit.
- Allow the BBQ to cool before moving or cleaning it.
- Do not immerse the BBQ in water or expose it to rain.
- Do not connect, operate, or disconnect the BBQ with wet hands.
- If the power cord or cable is damaged, it must be replaced by the manufacturer, a service agent, or a licensed technician.
- Do not alter or modify the BBQ. Repairs must be performed by a qualified technician
- Metal utensils such as forks, knives, or spatulas should not be left on the cooking surface as they can become hot.
- This BBQ is not intended for commercial use.
- The BBQ is not dishwasher safe.
- use may cause injury, damage, or death. Follow all instructions carefully.

Warnings

- The BBQ complies with all Australian mandated safety regulations.
- The BBQ has integrated short-circuit protection and over-temperature protection.

TABLE OF CONTENTS

SAFETY INFORMATION ----- 2

PRODUCT SPECIFICATIONS ----- 4

INCLUDED COMPONENTS ----- 5

PRODUCT FEATURES ----- 6

PRODUCT OVERVIEW ----- 7

USING THE ELECTRIC BBQ GRILL ----- 8

CLEANING INSTRUCTIONS ----- 9

TROUBLESHOOTING ----- 11

WARRANTY & SUPPORT INFORMATION ----- 12

PRODUCT SPECIFICATIONS

 
PRODUCT DIMENSIONS	280 x 538 x 31 mm (LWH)
PRODUCT WEIGHT	2.92kg
WORKING VOLTAGE	230V-24V, 50Hz
STARTING POWER	1450W
RATED POWER	1400W
STANDBY CURRENT	15.44 mA
TEMPERATURE LEVELS	Heat preservation - 80°C Low heat - 125°C to 135°C Medium heat - 165°C to 180°C High heat - 200°C to 220°C
PLATE MATERIAL	Non-stick ceramic coating
SAFETY PROTECTION	Short-circuit protection, over-temperature protection
CERTIFICATION	AS/NZS CISPR 14.1, AS/NZS 60335.2

INCLUDED COMPONENTS



Oxford Fabric Carry Bag

Silicone Drip Tray

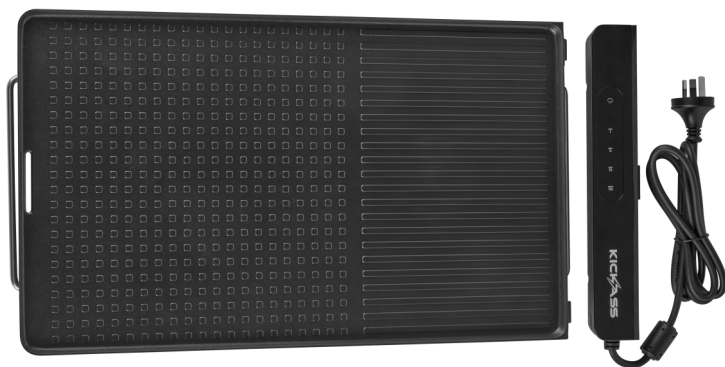

Electric Barbecue

PRODUCT FEATURES

50cm Family Sized Cooking Surface

Family-sized 50cm cooking surface provides enough space to cook for several people at once, ideal for camping, picnics, and backyard gatherings.

Ultra Slim Portable Design

The compact, super thin 22mm design packs flat and light, making it easy to transport and store.

Non-Stick Ceramic Cooking Plate

A non-stick ceramic coating ensures food cooks evenly and slides off easily, simplifying cleanup.

Smart Multi-Level Temperature Control

Smart heat control with NTC sensor provides four temperature settings: 80°C for keeping food warm, 130°C for gentle cooking, 180°C for everyday cooking, and 220°C for high-heat searing and roasting.

One-Touch Operation

One-touch simple operation allows quick temperature adjustment.

Protective Carry Bag Included

The highly durable Oxford fabric carry bag provided protects the BBQ during transport and storage.

Easy Clean Silicone Drip Tray

The silicone drip tray catches grease and food drippings to minimise mess.

High Power Performance

Rated power of 1400W with start power of 1450W and standby current of 15.44mA.

 
Integrated Safety Protection

Safety protections include short-circuit protection and over-temperature protection.

Standard Household Power Compatible

Works with 230 to 240V, 50Hz power supply.

PRODUCT OVERVIEW

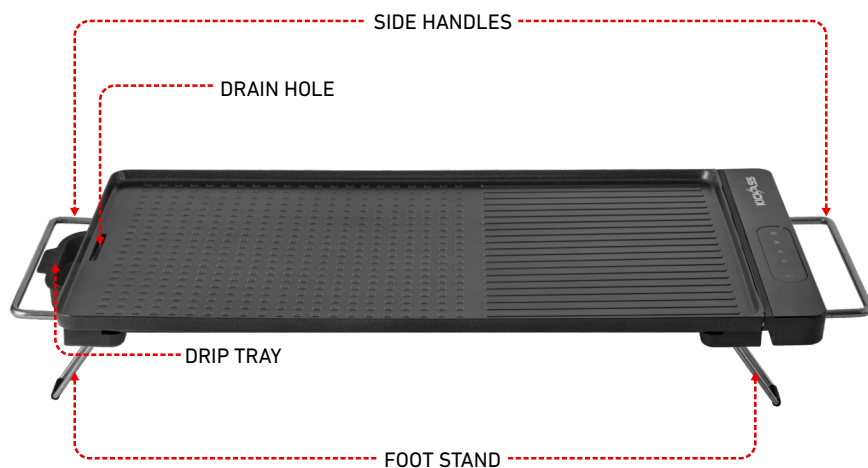

USING THE ELECTRIC BBQ GRILL

 
1. Remove the plate and the power interface base from the carry bag.




2. Pull the side handle of the plate on both sides and extend. Attach the base to the right side of the grill by pressing on both sides of the locking tabs. Ensure there is no space between the plate and the base.



3. Unfold the foot stand on both sides and place the grill on a flat and stable surface.

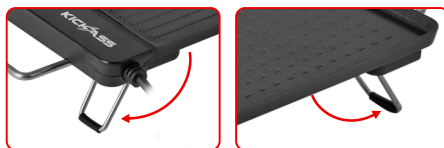

 4. Connect the grill to an AC power source that can supply at least 1500W, for example a standard wall power outlet, power station, or pure sine wave inverter.

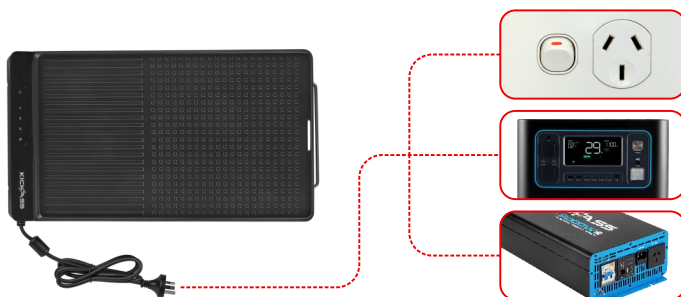

Note: When using a pure sine wave inverter, make sure it is rated at 1500W or higher. Using a lower-rated inverter may cause the grill to operate unpredictably or not start properly.

5. Once connected, the power button will start to blink. This indicates successful connection to a power source and the grill has entered standby mode.
6. Turn on the grill by pressing the power button. The button will light up continuously, indicating it is ready for grilling.



7. Press your preferred heat button, depending on the level required for the food you're going to grill:
 - **HEAT PRESERVATION - 80°C:** Keeps food warm without further cooking.
 - **LOW HEAT - 125°C TO 135°C:** Gentle cooking for delicate foods, slow-roasted meats, or vegetables.
 - **MEDIUM HEAT - 165°C TO 180°C:** Everyday cooking for prawns, fish fillets, sausages, and grilled vegetables.
 - **HIGH HEAT - 200°C TO 220°C:** High heat for searing steaks, BBQ pizza, toasting bread, or wraps.



8. Place the silicone drip towards the drain hole and lightly oil the grill surface.



9. Place the food on the plate. Monitor while cooking and use non-metal utensils such as silicone, wood, or heat-resistant plastic when adding, removing, or flipping your foods.



10. After cooking, turn off the grill using the power button and disconnect from the power supply. Allow the plate to cool completely before disassembling, cleaning, and storing.

CLEANING INSTRUCTIONS

- Switch off the grill and disconnect it from the power supply before cleaning. Allow the grill and cooking plate to cool completely.
- Empty the silicone drip tray and wipe off any grease or food residue. Wash the drip tray with warm water and mild dish soap, then rinse and dry thoroughly.
- Use a soft cloth or sponge and mild dish soap to gently wipe the ceramic cooking surface. Avoid abrasive scrubbers or harsh chemicals that could damage the coating.
- Wipe the outside of the grill with a damp cloth and mild dish soap if needed. Do not immerse the grill in water or any other liquid.
- Rinse with clean water if soap was used, then dry completely with a soft cloth.
- Ensure all parts are fully dry before reassembling or storing.
- Store the grill in the included Oxford carry bag in a cool, dry place.

TROUBLESHOOTING

No power detected even when plugged into a power source.	• Check that the outlet is working by plugging in another device, or try a different power source. • Ensure the plug is fully inserted. • If the power source is an inverter, make sure it is rated at 2000W or higher and check if the battery is sufficiently charged. • Check the condition of the cable for any visible damage such as frayed wires or loose fittings, as this may prevent proper connection. If the cable is damaged, contact KickAss Products customer support.
Food sticks on the ceramic plate.	• Lightly oil the plate before cooking; clean the plate thoroughly after each use to remove residue. • Use non-metal utensils such as silicone, wood, or heat-resistant plastic.
There is an excess of oil, grease and liquid drippings.	• The grill is designed to drain excess oil or liquid. Ensure the provided silicone drip tray is pointed correctly to the drain hole and check that the tray is not warped or bent.

WARRANTY & SUPPORT INFORMATION

KICKASS LIMITED WARRANTY

Your KickAss product is backed by our limited warranty against defects in materials and workmanship for the applicable warranty period. Warranty periods vary by product - please check the product page or the KickAss Warranty Index for details.

If a fault covered by warranty occurs, KickAss will, at its discretion:

- Repair the product, or
- Replace the product with the same or equivalent model, or
- Provide another suitable remedy in line with Australian Consumer Law (ACL).

Warranty claims may be declined if the issue is caused by:

- Normal wear and tear.
- Improper use, faulty installation, or lack of maintenance.
- Modifications, tampering, or unauthorised repairs.
- Accidents, damage in transit (customer organised), or environmental causes.
- Consumable items, unless defective in materials or workmanship.
- Damage caused by external events such as severe weather (including storms, lightning, hail, or flooding), fire, impact, explosions, vandalism, or theft.

MAKING A WARRANTY CLAIM

1. Visit our Support Portal: supportportal.kickassproducts.com.au
2. Locate your product via the Products & Troubleshooting section.
3. Submit a claim through the product form and follow the guidance from our Customer Service Team.

All warranty claims must include a completed product form, proof of purchase, and clear evidence of the defect or fault. Incomplete submissions or missing information may cause delays in processing and could result in your claim being declined.

Costs from third-party inspections or repairs are not covered unless approved in writing by KickAss.

YOUR RIGHTS UNDER ACL

This warranty is provided in addition to your rights under the Australian Consumer Law. You may be entitled to a replacement or refund for major failures, and to compensation for other reasonably foreseeable loss or damage.

Need Help?

Product Support: support@kickassproducts.com.au

Warranty Claims: warranty@kickassproducts.com.au

Customer Support Portal: supportportal.kickassproducts.com.au



KickAss is a registered trademark of
KickAss Products Pty Ltd.

Designed & imported by
KickAss Products Pty Ltd
39 Iris Place, Acacia Ridge, QLD 4110
Australia

Made in China

