

## How to change Hartal Door Blinds



Picture 1.

Located at the bottom of the window blind are 2 clips. Use a small putty knife or screw driver to slide in between the blind and clip at the front of the blind. This will release the blind.



Picture 2.

Are the top 2 clips that hold the string. Slide the clips covers back towards the arrows to release the strings.



Picture 3.

Slide and twist the blind up to remove it from the track. The blind has now been removed.