

Thule Adapters - Fit Guide

Before installation

- The installation of the adapter must be carried out by a qualified person
- In case you want to install a tent or a panel, make sure that the adapter is well positioned taking the windows, garage and door opening into account
- Check if you have a solid back ground for the installation of the awning adapter
- The adapter must support the awning at the awnings spring arms for a correct and stable mounting. When this is not possible use a full length adapter
- In order to get a watertight installation, use acid free silicone to fill up the drilled holes
- Always read the installation instructions carefully

Select the right adapter

1 Vehicle type



Motorhome



Caravan



Van

2 Vehicle brand

Model & Year

2 Select the mounting location and awning type

Wall mounting

- Most common installation
- Flat adapter mostly included

Roof mounting

- On top of the vehicle: more space under the awning
- Better integrated design
- Alternative in case of lack of space or width restrictions
- Caravan rail remains free

Rail mounting


TO 1200:

- Easy installation without adapter
- Not permanent


3 Is there an adapter with brand name available (manufacturer adapter)? If not: choose from the universal adapter range

4 Free space:






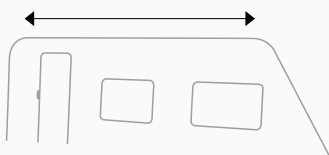
On the roof: Only count the straight space between roof curves for the installation of the adapters





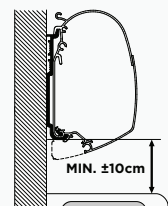
On the wall: Avoid lights and ventilation caps. Make sure the door can open under an opened awning









Adapters for wall mounted awnings

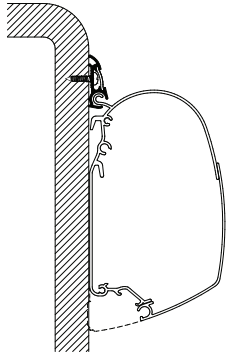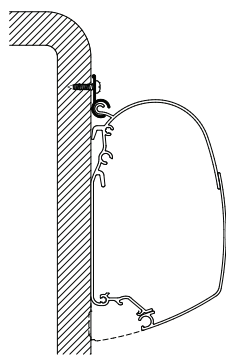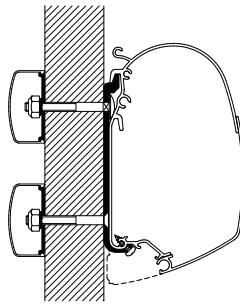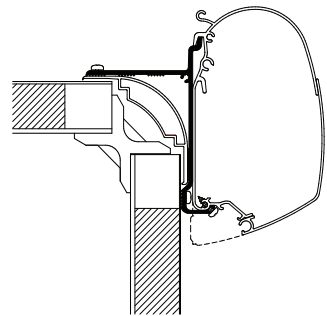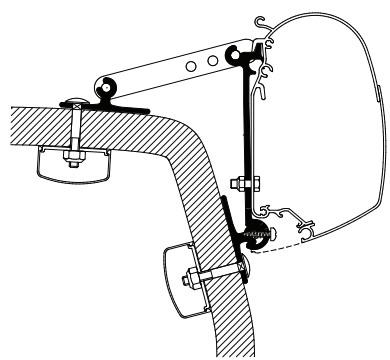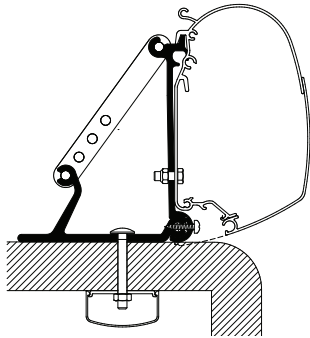UNIVERSAL	
<p>Caravan Rail Luxe</p> <p>307922 6.00m: 10 pcs</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 2000 / 1200</p>	<p>Caravan Rail</p> <p>307899 3.00m: 20 pcs 307908 6.00m: 20 pcs</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 2000 / 1200</p>
<p>Flat</p> <p>307915 40cm: 5 pcs 307909 75cm: 5 pcs 308040 3.00m 308041 3.50m 308042 4.00m 308043 4.50m 308044 5.00m 308046 6.00m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>High Top</p> <p>308005 Set: 1x 8cm + 2x 30cm 308008 3.00m 308012 4.00m 309960 4.50m 309961 5.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p>Omni Wall</p> <p>307905 Set: 2x 8cm + 1x 4cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>	<p>Omni Roof</p> <p>307910 Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>

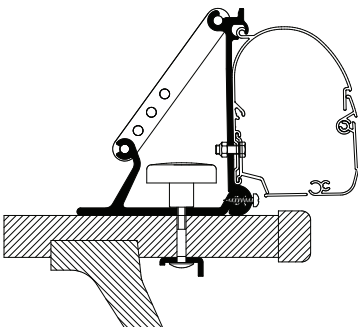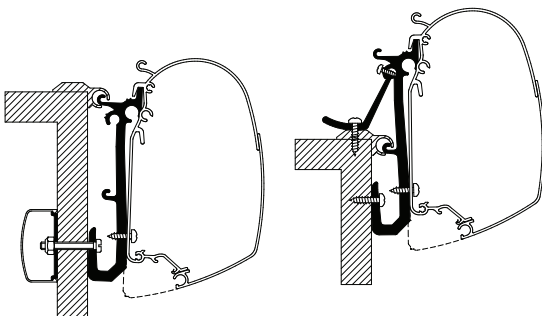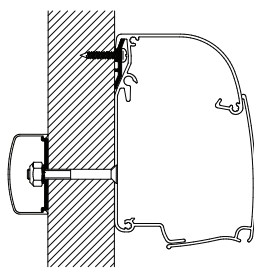Adapters for wall mounted awnings

UNIVERSAL	
<p>Omni Auto</p> <p>307912 Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>	<p>Caravan</p> <p>307881 Set: 2x 8cm + 2x 4cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900 / 2000</p>
<p>Rail Bracket</p> <p>309853 3.50m: 10 pcs 309854 4.00m: 10 pcs 309855 4.50m: 10 pcs</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	

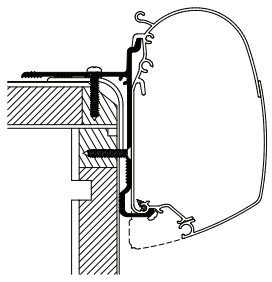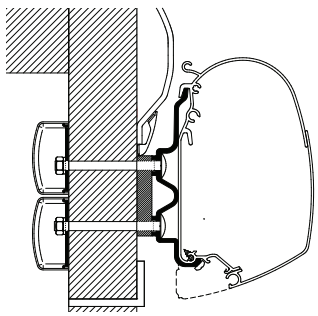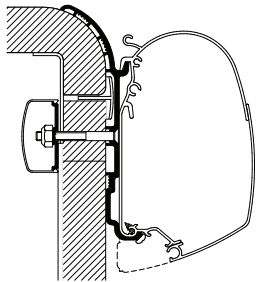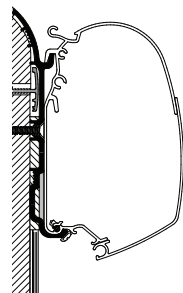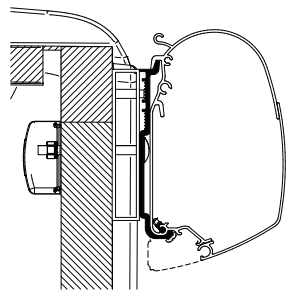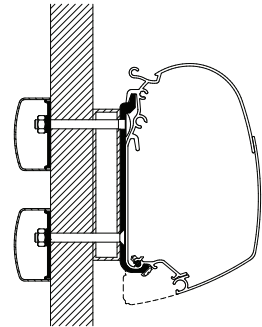Adapters for wall mounted awnings


MANUFACTURER	
<p>Adria Coral </p> <p>308007 Set: 2x 30cm + 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Arca ≥ 2009 </p> <p>308484 4.50m Set: 1x 8cm + 2x 40cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p>Bürstner </p> <p>308025 Set: 2x 35cm + 1x 8cm 308027 3.00m 308028 3.50m 308029 4.00m 308030 4.50m 308031 5.00m 308032 5.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Bürstner Ixeo </p> <p>301425 Model T640 - 3.50m 309978 Model T680 - 4.00m 309979 Model T728/734 - 4.50m Also fits Dethleffs 4-Travel</p> <div style="text-align: right;">New</div>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p>Carado - Sunlight </p> <p>309983 Set: 1x 17.5cm + 1x 4cm + 1x 40cm</p> <div style="text-align: right;">New</div>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Dethleffs Globebus </p> <p>308934 Set: 2x 4cm + 2x 17.5cm - < 4.00m 308004 Set: 2x 8cm + 2x 40cm - 4.00m > 6.00m 308002 3.00m 308003 3.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>

Adapters for wall mounted awnings

MANUFACTURER

Eriba Touring

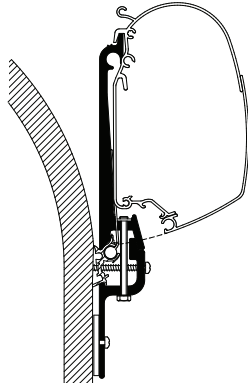
307882 Set: 3x 4cm



Fits Thule Omnistor Awnings:
5200 / 4900 / 2000

Eden - Allegro < 2010


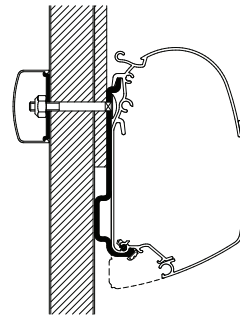
307919 Set: 1x 70cm + 1x 30cm + 1x 8cm
308022 3.50m
308023 4.00m



Fits Thule Omnistor Awnings:
8000 / 5200 / 4900

Eden - Allegro - Trigano ≥ 2010

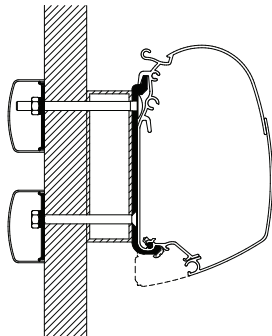
308764 Set: 3x 50cm



Fits Thule Omnistor Awnings:
8000 / 5200 / 4900

Hymer Car 99

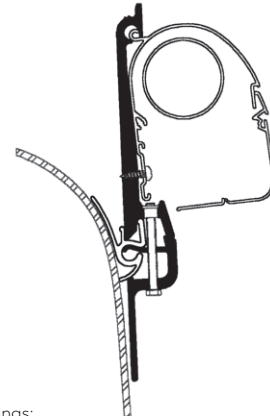
307885 Set 3pcs



Fits Thule Omnistor Awnings:
8000 / 5200 / 4900

Hymer Car 302 - Ducato H1

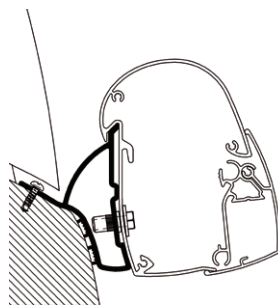308659 Set: 2x 12cm



Fits Thule Omnistor Awning:
5102


Hymer 2016

309985 2.60m
309986 3.00m
309987 3.50m
309988 4.00m
309989 4.50m
309990 5.00m
309991 5.50m
309992 6.00m

Fits all vehicles built
since 2012









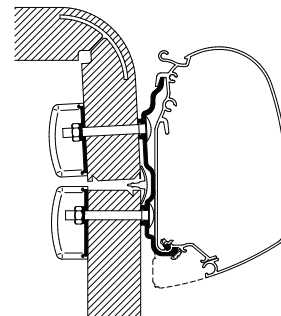New



Fits Thule Omnistor Awnings:
8000 / 5200 / 4900

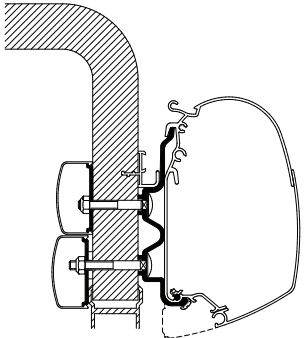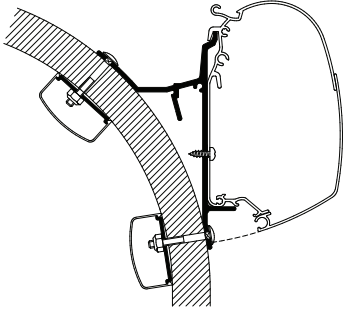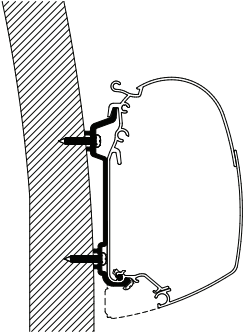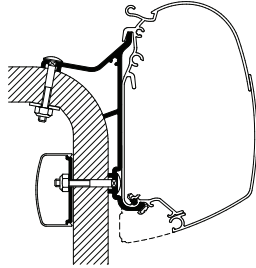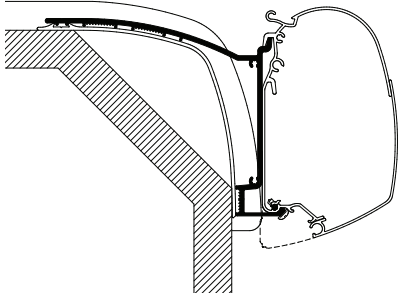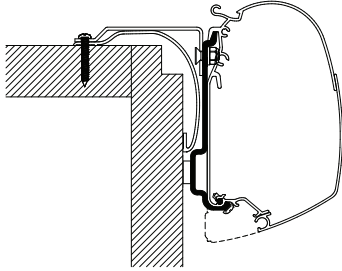
Adapters for wall mounted awnings

MANUFACTURER	
<p>Hymercamp ≤ 2011</p> <p>307933 3.00m 307944 3.50m 307957 4.00m 307965 4.50m 307971 5.00m 307976 5.50m 308686 6.00m Also fits Rapido</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Hymer S ≤ 1994</p> <p>307877 Set: 2x 8cm + 2x 35cm 307928 3.00m</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>
<p>Hymer SX</p> <p>308017 4.00m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Hymer B2 - Van</p> <p>307932 3.00m 307943 3.50m 307956 4.00m 307964 4.50m 307970 5.00m 307975 5.50m 307978 6.00m Also fits Eriba Motorhome 2009</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p>Laika Ecovip - Rexosline</p> <p>308047 Set: 2x 30cm 308049 4.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Laika X</p> <p>308297 Set: 3x 17.5cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>


Adapters for wall mounted awnings

MANUFACTURER

Pilote Explorateur



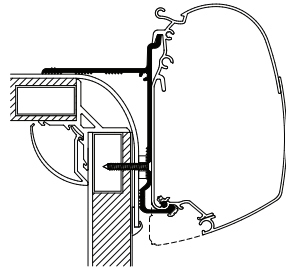308006 Set: 2x 8cm + 2x 40cm
308014 4.00m




Fits Thule Omnistor Awnings:
8000 / 5200 / 4900

Rapido Club ≥ 1995




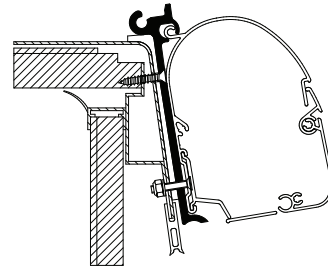307890 Set: 3x 8cm




Fits Thule Omnistor Awning:
2000

Rapido Serie



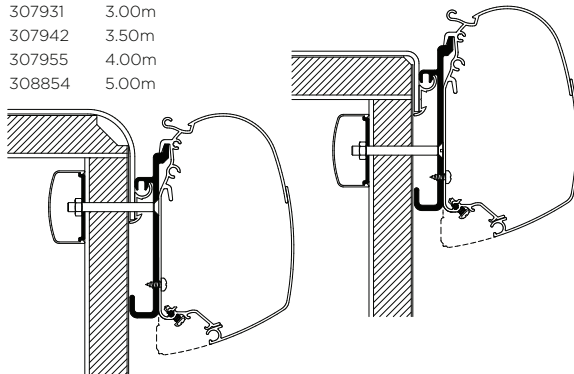307923 Set: 2x 18cm + 1x 1m - Serie 7
307911 Set: 2x 18cm + 2x 8cm - Serie 9
307931 3.00m
307942 3.50m
307955 4.00m
308854 5.00m




Fits Thule Omnistor Awnings:
8000 / 5200 / 4900

Le Voyageur




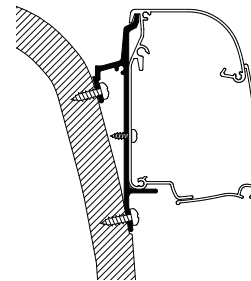307953 4.00m




Fits Thule Omnistor Awnings:
8000 / 4900

Swift Rio









307028 Set: 1x 17.5cm + 1x 4cm + 1x 40cm

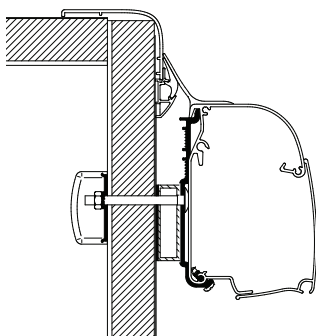New









Fits Thule Omnistor Awnings:
5200 / 4900

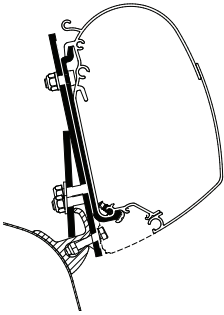
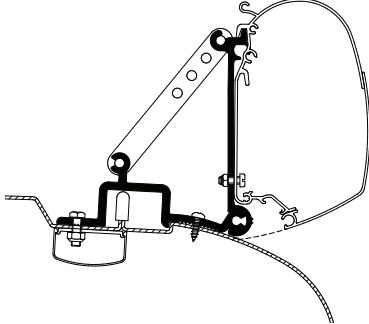
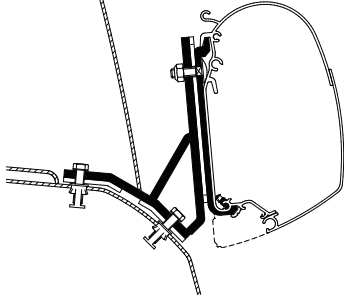
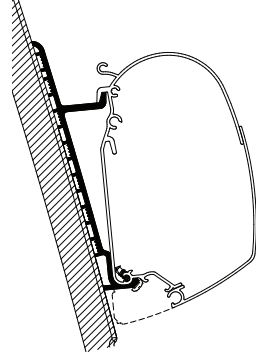
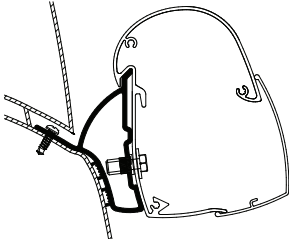
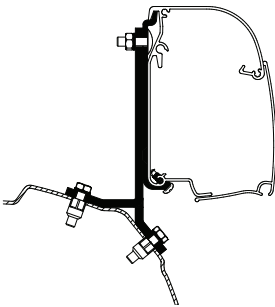
Adapters for wall mounted awnings

VAN	
<p>Brandrup Rail 307886 Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>	<p>Ducato - Jumper - Boxer ≤ 2006 307913 Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 2000</p>
<p>Ducato - Iveco H1/H2 Lift Roof 308960 Set: 3x 17.5cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p>Ducato H3 + EPDM 309999 Set: 2x 50cm + 1x 10cm</p>  <p>New</p> <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>
<p>Ducato H1 308659 Set: 2x 12cm</p>  <p>Fits Thule Omnistor Awning: 5102</p>	<p>Ford Transit/Tourneo Custom 309980 Set: 2x 8cm - RHD (UK) 309981 Set: 2x 8cm - LHD (EU) Combination with Lift Roof possible</p>  <p>New</p> <p>Fits Thule Omnistor Awning: 4900 (2.60m length)</p>

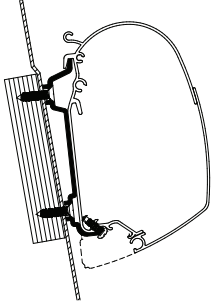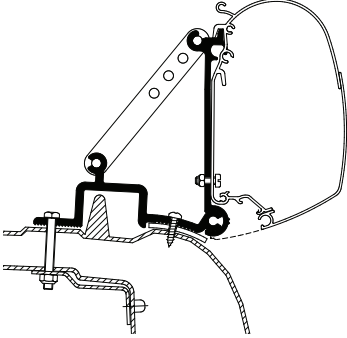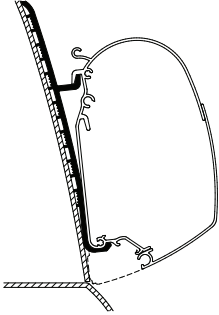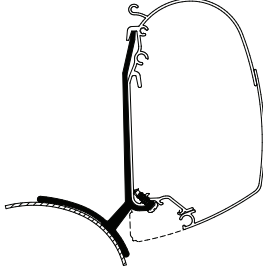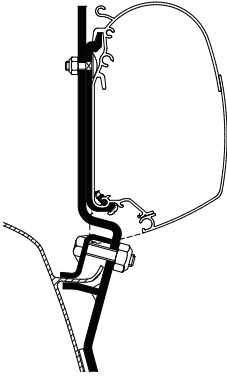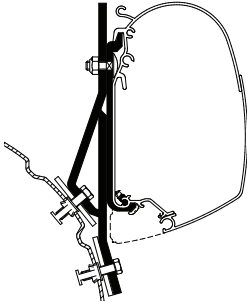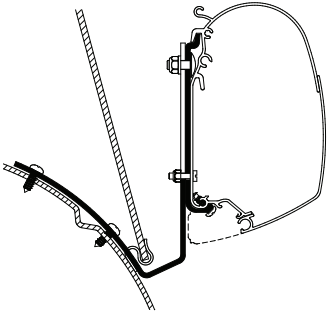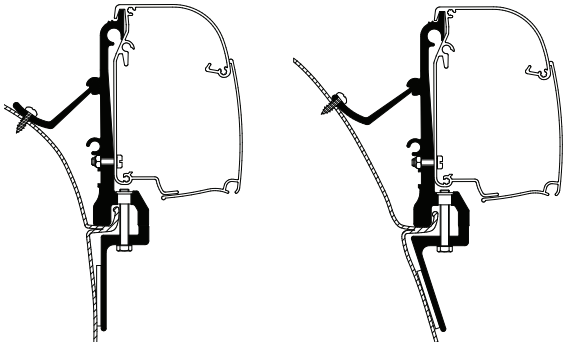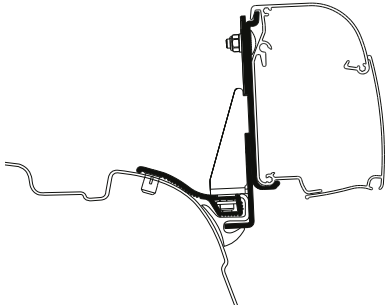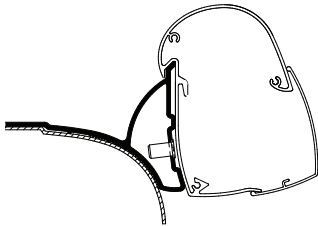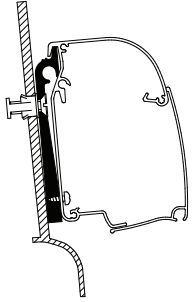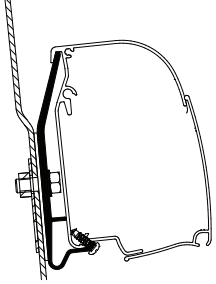
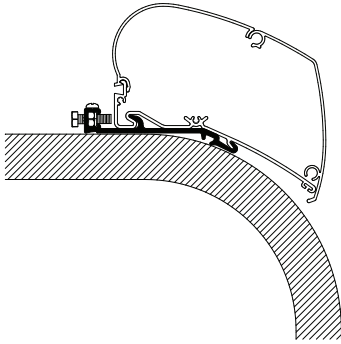

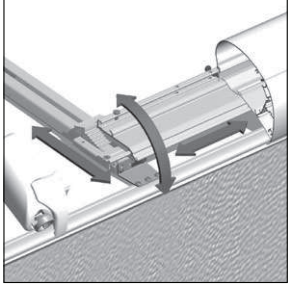

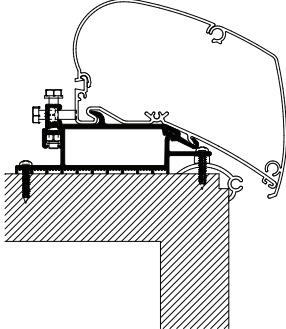
Adapters for wall mounted awnings

VAN	
<p>Ford Transit High Roof</p> <p>307999 Set: 2x 50cm + 1x 50cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Renault Master 1998-2010</p> <p>307918 Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900 / 2000</p>
<p>Renault Master High Roof H3</p> <p>308072 Set: 2x 50cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p>Renault Traffic - Opel Vivaro</p> <p>307996 Set: 2x 50cm Also fits Nissan Primastar</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>
<p>VW T2 & T3</p> <p>307880 Set: 2x 8cm + 1x 4cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p>VW T4</p> <p>307879 Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>







Adapters for wall mounted awnings

VAN	
<p>VW T4 Lift Roof</p> <p>307887 Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p>Van</p> <p>307884 Set: 1x 4cm + 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>
<p>VW T5/T6 Reimo Multirail</p> <p>Thule Omnistor 4900 Awnings + Adapter and Rain Gutter incl.</p> <p>301410 2.60m ANT 31 - LHD (EU) 301420 3.00m ANT 31 - LHD (EU) 301411 2.60m ANT 31 - RHD (UK) 301421 3.00m ANT 31 - RHD (UK)</p> <p>NOTE: Reimo exclusivity</p>  <p style="text-align: right;">New</p>	<p>VW T5/T6</p> <p>Thule Omnistor 5102 Awning + Adapter included</p> <p>309851 2.60m ANT 31 309852 2.60m GREY 31</p> 
<p>Westfalia Adapter</p> <p>308426 Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p>Westfalia Ford Nugget</p> <p>309984 Set: 2x 12cm</p>  <p style="text-align: right;">New</p> <p>Fits Thule Omnistor Awning: 4900 (2.60m length)</p>

Adapters for roof mounted awnings

UNIVERSAL	
<p>Flat Roof </p> <p>308097 3.00m 308098 3.50m 308099 4.00m 308100 5.50m 306799 6.00m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>	<p>Installation profiles </p> <p>308054 Set: 2x mounting rails + Adapter 308055 Set: 3x mounting rails + Adapter</p> <p>Awnings ≤ 3.50m: 1x 308054 Awnings 3.75m - 4.50m: 1x 308055 Awnings ≥ 5.00m: 2x 308054</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>
<p>Roof Top </p> <p>308299 Set: 2x 27cm + 2x 50cm</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>	

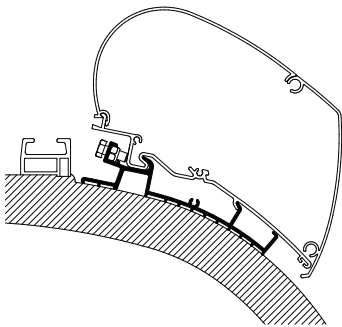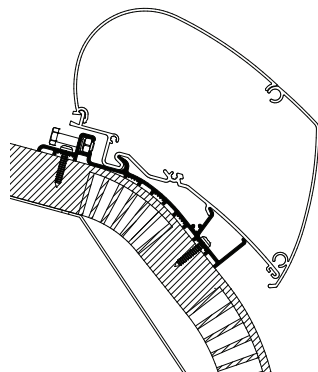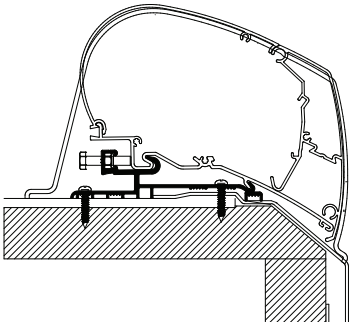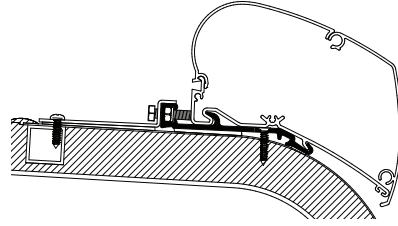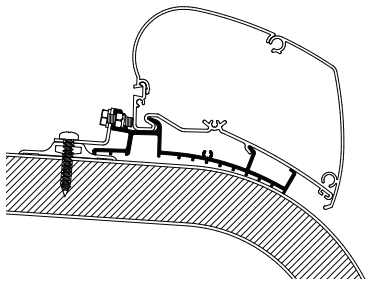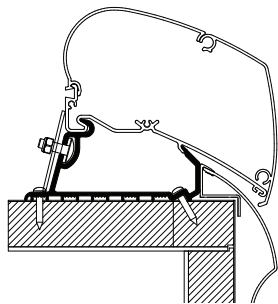Adapters for roof mounted awnings


MANUFACTURER MOTORHOME	
<p>Carthago Chic < 2014</p> <p>309892 3.50m 309888 4.00m 309889 4.50m 309890 5.00m 309891 5.50m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>	<p>Carthago C-Line ≥ 2014</p> <p>307250 3.50m 307251 4.00m 307252 4.50m 307253 5.00m 307254 5.50m 301439 6.00m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>
<p>Concorde</p> <p>301415 6.00m</p> <p style="text-align: right;">New</p>  <p>Fits Thule Omnistor Awning: 9200</p>	<p>Esterel</p> <p>308110 4.00m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>
<p>Giottiline</p> <p>308107 Set: 2x 10cm + 2x 40cm</p>  <p>Fits Thule Omnistor Awnings 9200 / 6200</p>	<p>Hobby Camper 2013</p> <p>309976 Set: 2x 27cm + 2x 50 cm</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>

Adapters for roof mounted awnings

MANUFACTURER MOTORHOME

Hymer SX


308087	3.50m
308088	4.00m
308089	4.50m
308090	5.00m
308091	5.50m
306800	6.00m

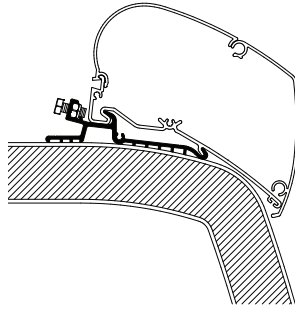

Fits Thule Omnistor Awnings:
9200 / 6200

Hymer 2013

306951	3.50m
306952	4.00m
306953	4.50m
306954	5.00m
306955	5.50m
306956	6.00m


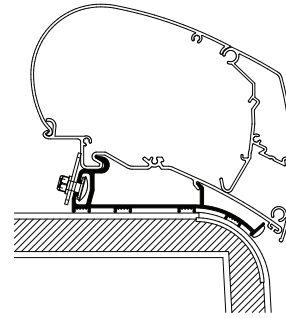


Fits Thule Omnistor Awnings:
9200 / 6200

LMC Liberty TI/TEC

307042	3.00m
307043	3.50m
307044	3.75m
307045	4.00m
307046	4.50m
307049	5.00m
307047	5.50m
307048	6.00m

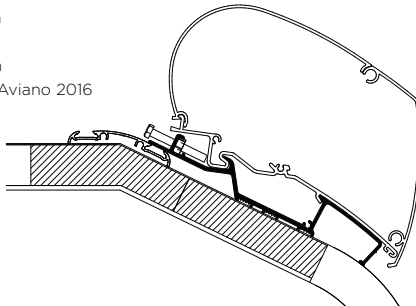
Also fits Bürstner Aviano 2016




Fits Thule Omnistor Awnings:
9200 / 6200

Carthago Malibu

308078	3.50m
308079	4.00m
301417	4.50m
301418	5.00m




New

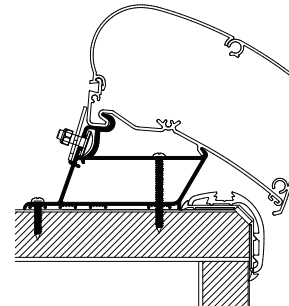


Fits Thule Omnistor Awnings:
6200

Niesmann Smove

301423	Motorhome Model 6.9B/Q - 3.00m
301424	Motorhome Model 7.4B/E - 3.50m





New

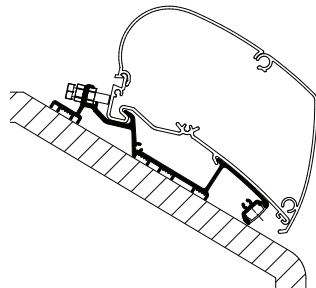

Fits Thule Omnistor Awnings:
6200



Rapido Distinction

309945	4.00m
309944	4.50m

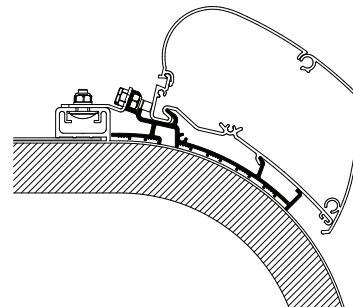

Fits Thule Omnistor Awnings:
9200 / 6200

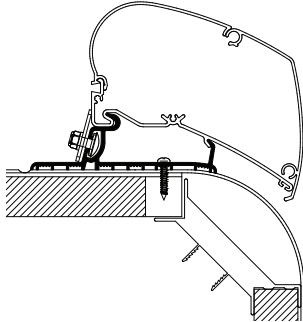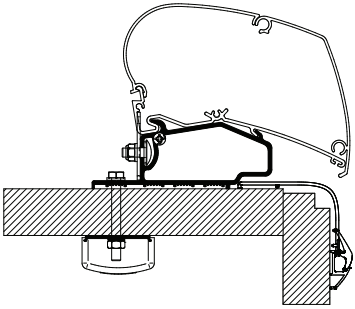Adapters for roof mounted awnings

MANUFACTURER MOTORHOME	
<p>Autosleepers 2013</p> <p>306794 3.00m 306795 3.50m 306796 4.00m 306797 5.00m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>	<p>Swift Escape 2017</p> <p>301412 Model 604/695 - 3.00m awning 301413 Model 622/614/664/685 - 3.50m awning 301414 Model 674/684/694 - 4.25m awning</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>

New

Adapters for roof mounted awnings

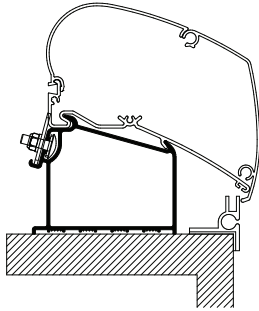
MANUFACTURER CARAVAN

Adria Caravan ≥ 2015

309982 Set: 2x 50cm + 2x 27cm




New



Fits Thule Omnistor Awnings:
6200 / 9200

Caravan

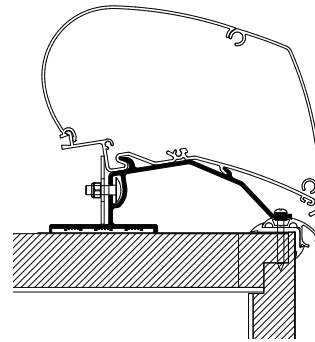306757 Set: 3x 1.00m
309957 3.00m
309962 3.25m
309958 3.50m
309963 3.75m
306807 4.00m
309964 4.25m
306809 4.50m
307132 5.00m
307133 5.50m
309959 6.00m



Fits Thule Omnistor Awnings on different vehicle brands:
Fendt, Dethleffs, LMC*, Trigano : 9200 / 6200
*Extra fixation: LMC Caravan Kit 307064

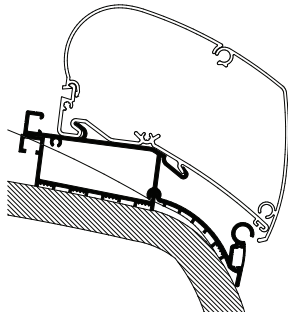
Eriba Touring > 2008

Adapter + LED
307390 2.80m Triton
306710 3.25m Troll

NOTE: Exclusively via Hymer Eriba Touring Dealer




New



Fits Thule Omnistor Awnings:
6200

Fendt Brilliant

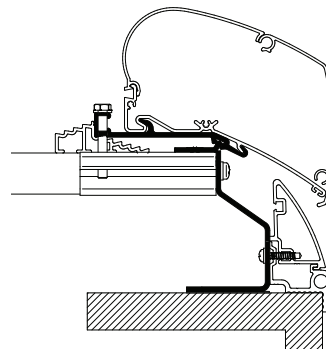
309692 Set: 2x 11.5cm + 1x 27cm + 1x 50cm



Fits Thule Omnistor Awnings:
9200 / 6200

Hobby Caravan 2009

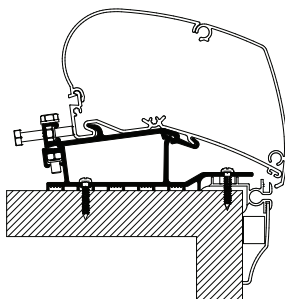
308663 Set: 2x 27cm + 2x 50cm



Fits Thule Omnistor Awnings:
9200 / 6200

Hobby Premium & Ontour

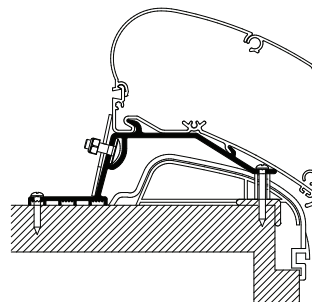309819 Set: 2x 27cm + 2x 50cm




Fits Thule Omnistor Awnings:
9200 / 6200

Adapters for roof mounted awnings

MANUFACTURER CARAVAN

Hobby Caravan ≥ 2014

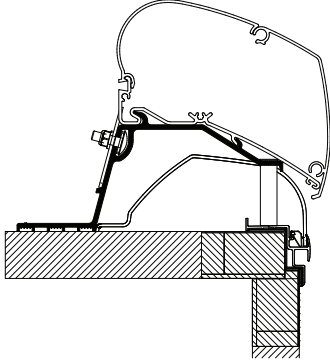
306948



Fits Thule Omnistor Awnings:
9200 / 6200

Hymer 2013 Nova Roof


306951	3.50m
306952	4.00m
306953	4.50m
306954	5.00m
306955	5.50m
306956	6.00m

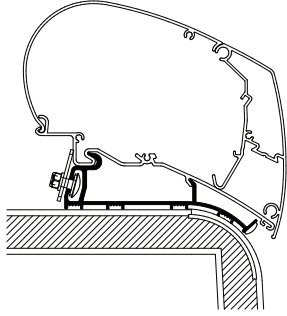

Fits Thule Omnistor Awnings:
9200 / 6200







LMC Caravan Roof Adapter Kit

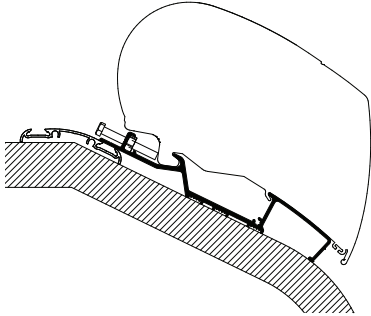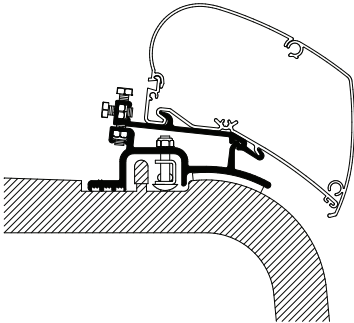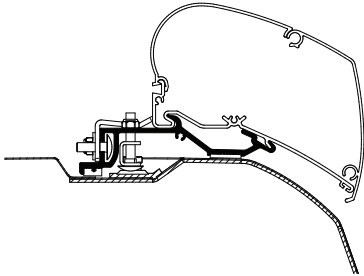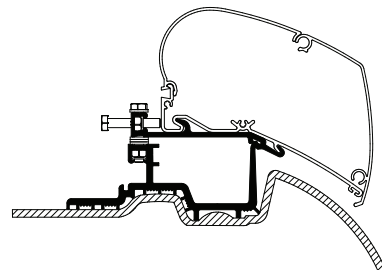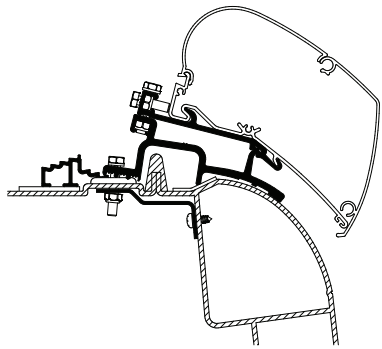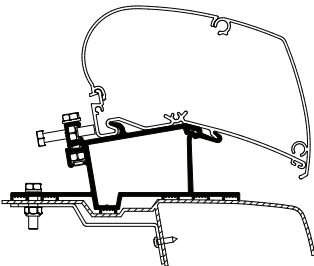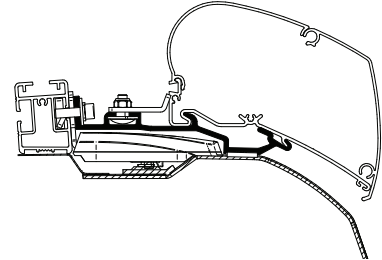307064

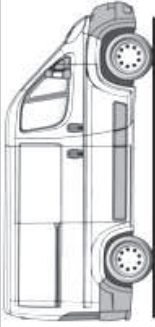
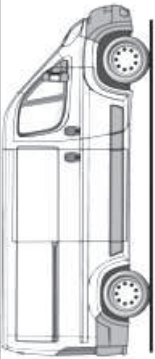
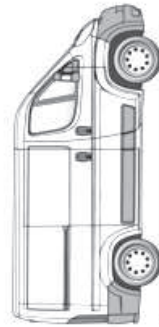

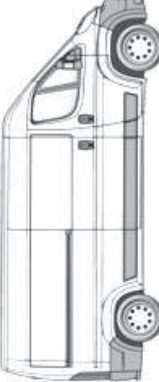



Fits Thule Omnistor Awnings:
9200 / 6200









Adapters for vans

VAN	
<p>Ducato - Jumper - Boxer 1994-2006</p> <p>Adapter + EPDM 308058</p>  <p>Fits Thule Omnistor Awning: 6200</p>	<p>Ducato - Jumper - Boxer ≥ 2007</p> <p>Adapter + EPDM + adapter covers</p> <p>301649 L2H2 3.25m 301650 L3H2 3.75m / L4H2 4.00m</p>  <p>Fits Thule Omnistor Awning: 6200</p>
<p>Mercedes Sprinter >2007 VW Crafter 2007-2016</p> <p>308073</p>  <p>Fits Thule Omnistor Awning: 6200</p>	<p>Renault Master - Opel Movano 1998-2010</p> <p>308059</p>  <p>Fits Thule Omnistor Awning: 6200</p>
<p>Renault Master - Opel Movano ≥ 2011</p> <p>308959</p>  <p>Fits Thule Omnistor Awning: 6200</p>	<p>Adapter Roof Rack Ducato - Jumper - Boxer H2</p> <p>Adapter + EPDM + adapter covers</p> <p>301651 Ducato L2H2 301652 Ducato L3H2 / L4H2</p>  <p>Fits Thule Omnistor Awning: 6200</p>

Adapters for vans

Fiat Ducato – Peugeot Boxer – Citroën Jumper				
	C	M	L	XL
	L1 (4963mm)	L2 (5413mm)	L3 (5998mm)	L4 (6363mm)
H1 (2254mm)	 <p>Wall awning 2.60m - 308960</p>	 <p>Wall awning 3.00m - 308960</p>		
H2 (2524mm)	 <p>- Roof awning 2.60m - 301649 - Wall awning 2.60m (Ducato H2 Lift Roof) - 308960</p>	 <p>- Roof awning 3.25m - 301649 - Wall awning 3.25m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301651</p>	 <p>- Roof awning 3.75m - 301650 - Wall awning 3.75m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>	 <p>- Roof awning 4.00m - 301650 - Wall awning 4.00m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>
H3 (2764mm)	<p>wheel base 3000 awning length 2.60m</p>	<p>wheel base 3450 awning length 3.00 - 3.25m</p>	<p>wheel base 4035 awning length 3.50m - 3.75m</p>	<p>wheel base 4035 XL awning length 4.00m</p>

Adapters for vans

		Renault Master - Opel Movano			
		C	M	L	XL
H1 (2307mm)		L1 (5048mm)	L2 (5548mm)	L3 (6198mm)	L4 (6848mm)
H2 (2500-2549mm)			 Roof awning 3,25m - 308959	 Roof awning 3,75m - 308959	 Roof awning 4,00m - 308959
H3 (2744-2815mm)			 Wall awning 3,00m - 308072	 Wall awning 3,50m - 308072	 Wall awning 4,00m - 308072
	wheel base 3182		wheel base 3682	wheel base 4332	wheel base 4332 XL

Adapters for vans

		Mercedes Sprinter - VW Crafter			
		C	M	L	XL
		L1 (5245mm)	L2 (5910mm)	L3 (6945mm)	L4 (7345mm)
H1 (2435-2530mm)					
H2 (2720-2820mm)					
H3 (3045-3055mm)					
	wheel base 3250	wheel base 3665	wheel base 4325	wheel base 4325 XL	
			Roof awning 3,25m - 308073	Roof awning 3,75m - 308073	Roof awning 4,00m - 308073

NOTE : Adapter 308073 is not compatible with VW Crafter models as from 2017