

# Thule Adapters - Fit Guide

## Before installation

- The installation of the adapter must be carried out by a qualified person
- In case you want to install a tent or a panel, make sure that the adapter is well positioned taking the windows, garage and door opening into account
- Check if you have a solid back ground for the installation of the awning adapter
- The adapter must support the awning at the awnings spring arms for a correct and stable mounting. When this is not possible use a full length adapter
- In order to get a watertight installation, use acid free silicone to fill up the drilled holes
- Always read the installation instructions carefully

## Select the right adapter

### 1 Vehicle type



Motorhome



Caravan



Van

### 2 Vehicle brand

Model & Year

### 2 Select the mounting location and awning type

Wall mounting

- Most common installation
- Flat adapter mostly included

Roof mounting

- On top of the vehicle: more space under the awning
- Better integrated design
- Alternative in case of lack of space or width restrictions
- Caravan rail remains free

Rail mounting


TO 1200:

- Easy installation without adapter
- Not permanent


### 3 Is there an adapter with brand name available (manufacturer adapter)? If not: choose from the universal adapter range

### 4 Free space:






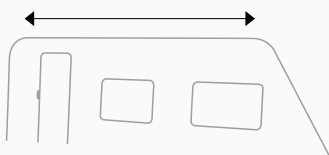
On the roof: Only count the straight space between roof curves for the installation of the adapters





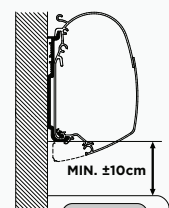
On the wall: Avoid lights and ventilation caps. Make sure the door can open under an opened awning









# Adapters for wall mounted awnings

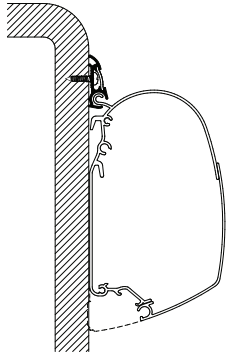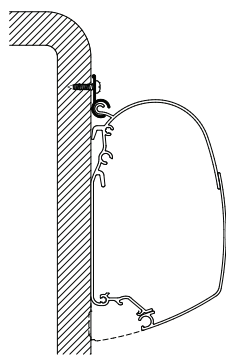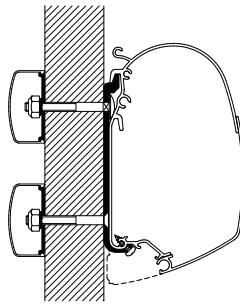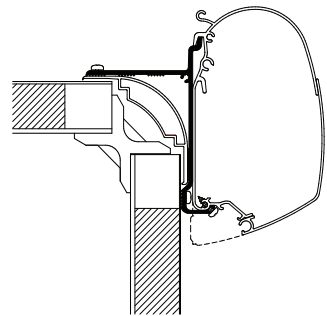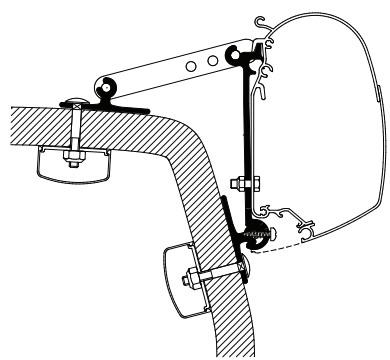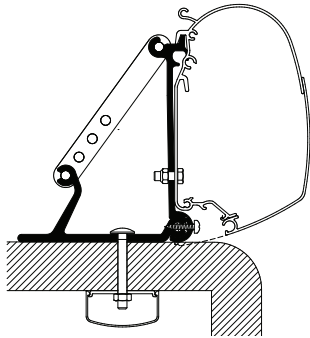UNIVERSAL	
<p><b>Caravan Rail Luxe</b> </p> <p>307922    6.00m: 10 pcs</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 2000 / 1200</p>	<p><b>Caravan Rail</b> </p> <p>307899    3.00m: 20 pcs 307908    6.00m: 20 pcs</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 2000 / 1200</p>
<p><b>Flat</b> </p> <p>307915    40cm: 5 pcs 307909    75cm: 5 pcs 308040    3.00m 308041    3.50m 308042    4.00m 308043    4.50m 308044    5.00m 308046    6.00m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>High Top</b> </p> <p>308005    Set: 1x 8cm + 2x 30cm 308008    3.00m 308012    4.00m 309960    4.50m 309961    5.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p><b>Omni Wall</b> </p> <p>307905    Set: 2x 8cm + 1x 4cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>	<p><b>Omni Roof</b> </p> <p>307910    Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>

# Adapters for wall mounted awnings

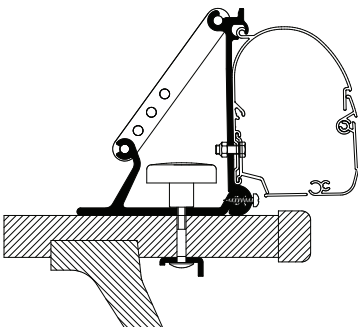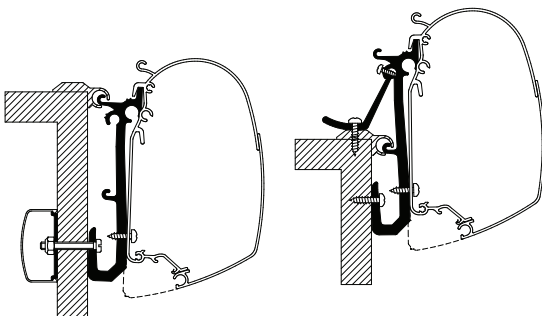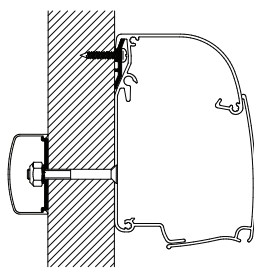UNIVERSAL	
<p><b>Omni Auto</b></p> <p>307912    Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>	<p><b>Caravan</b></p> <p>307881    Set: 2x 8cm + 2x 4cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900 / 2000</p>
<p><b>Rail Bracket</b></p> <p>309853    3.50m: 10 pcs 309854    4.00m: 10 pcs 309855    4.50m: 10 pcs</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	

# Adapters for wall mounted awnings

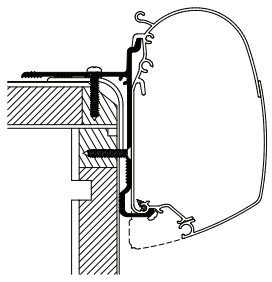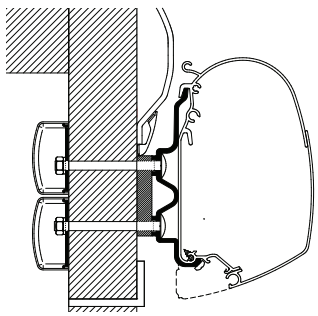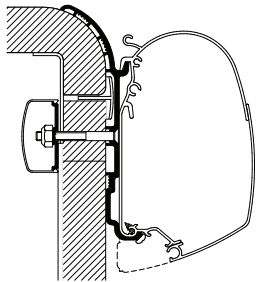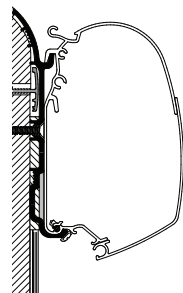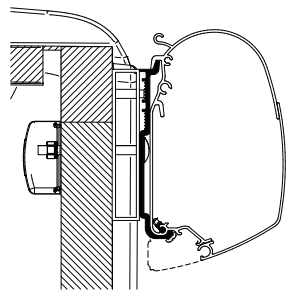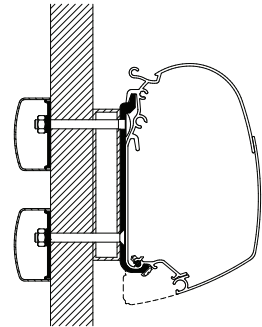
MANUFACTURER	
<p><b>Adria Coral</b> </p> <p>308007 Set: 2x 30cm + 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Arca ≥ 2009</b> </p> <p>308484 4.50m Set: 1x 8cm + 2x 40cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p><b>Bürstner</b> </p> <p>308025 Set: 2x 35cm + 1x 8cm                      308027 3.00m                      308028 3.50m                      308029 4.00m                      308030 4.50m                      308031 5.00m                      308032 5.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Bürstner Ixeo</b> </p> <p>301425 Model T640 - 3.50m                      309978 Model T680 - 4.00m                      309979 Model T728/734 - 4.50m                      Also fits Dethleffs 4-Travel</p> <div style="text-align: right;"><b>New</b></div>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p><b>Carado - Sunlight</b> </p> <p>309983 Set: 1x 17.5cm + 1x 4cm + 1x 40cm</p> <div style="text-align: right;"><b>New</b></div>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Dethleffs Globebus</b> </p> <p>308934 Set: 2x 4cm + 2x 17.5cm - &lt; 4.00m                      308004 Set: 2x 8cm + 2x 40cm - 4.00m &gt; 6.00m                      308002 3.00m                      308003 3.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>

# Adapters for wall mounted awnings
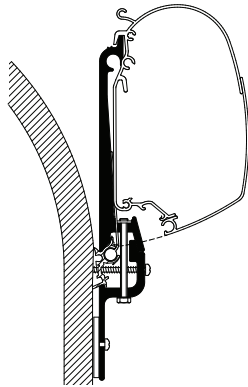
## MANUFACTURER

### Eriba Touring


307882 Set: 3x 4cm



Fits Thule Omnistor Awnings:  
5200 / 4900 / 2000

### Eden - Allegro < 2010


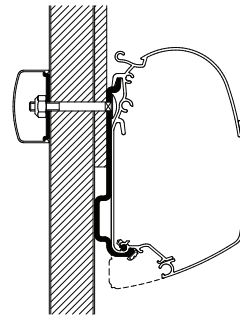
307919 Set: 1x 70cm + 1x 30cm + 1x 8cm  
308022 3.50m  
308023 4.00m



Fits Thule Omnistor Awnings:  
8000 / 5200 / 4900

### Eden - Allegro - Trigano ≥ 2010

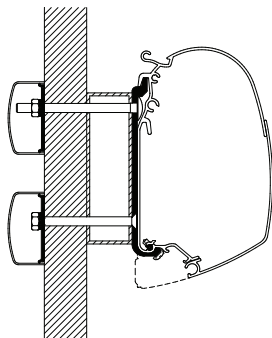
308764 Set: 3x 50cm



Fits Thule Omnistor Awnings:  
8000 / 5200 / 4900

### Hymer Car 99

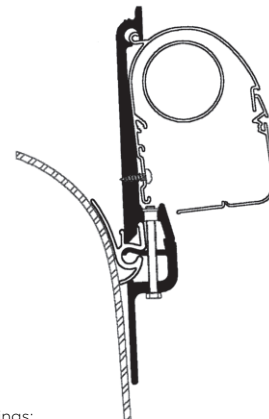
307885 Set 3pcs



Fits Thule Omnistor Awnings:  
8000 / 5200 / 4900

### Hymer Car 302 - Ducato H1

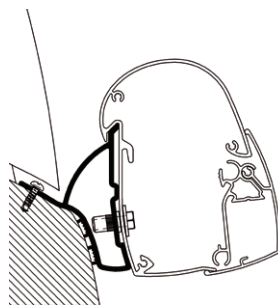308659 Set: 2x 12cm



Fits Thule Omnistor Awning:  
5102


### Hymer 2016

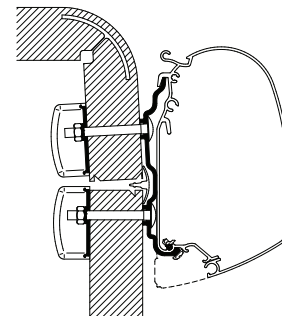309985 2.60m  
309986 3.00m  
309987 3.50m  
309988 4.00m  
309989 4.50m  
309990 5.00m  
309991 5.50m  
309992 6.00m

Fits all vehicles built  
since 2012









**New**



Fits Thule Omnistor Awnings:  
8000 / 5200 / 4900


# Adapters for wall mounted awnings

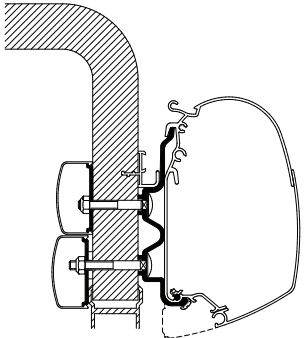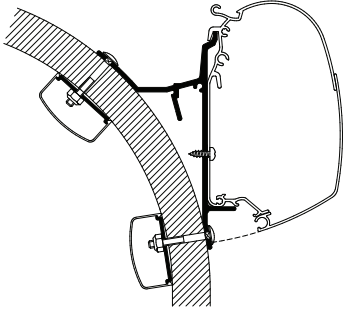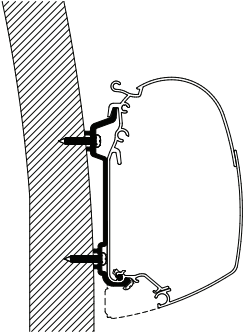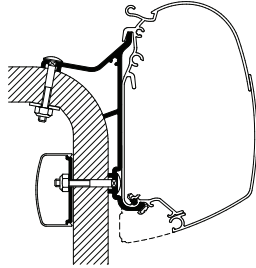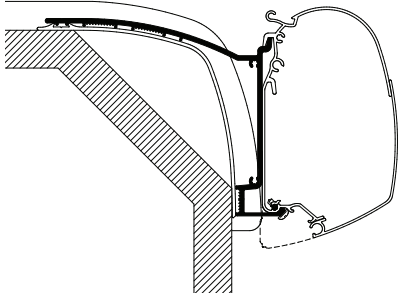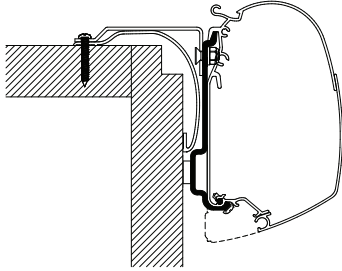MANUFACTURER	
<p><b>Hymercamp ≤ 2011</b></p> <p>307933 3.00m                      307944 3.50m                      307957 4.00m                      307965 4.50m                      307971 5.00m                      307976 5.50m                      308686 6.00m                      Also fits Rapido</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Hymer S ≤ 1994</b></p> <p>307877 Set: 2x 8cm + 2x 35cm                      307928 3.00m</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>
<p><b>Hymer SX</b></p> <p>308017 4.00m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Hymer B2 - Van</b></p> <p>307932 3.00m                      307943 3.50m                      307956 4.00m                      307964 4.50m                      307970 5.00m                      307975 5.50m                      307978 6.00m                      Also fits Eriba Motorhome 2009</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>
<p><b>Laika Ecovip - Rexosline</b></p> <p>308047 Set: 2x 30cm                      308049 4.50m</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Laika X</b></p> <p>308297 Set: 3x 17.5cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>


# Adapters for wall mounted awnings

## MANUFACTURER

### Pilote Explorateur



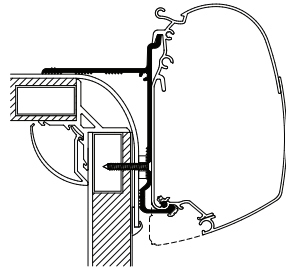308006 Set: 2x 8cm + 2x 40cm  
308014 4.00m




Fits Thule Omnistor Awnings:  
8000 / 5200 / 4900

### Rapido Club ≥ 1995




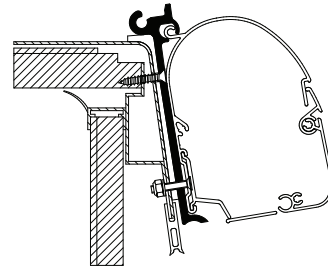307890 Set: 3x 8cm




Fits Thule Omnistor Awnings:  
2000

### Rapido Serie



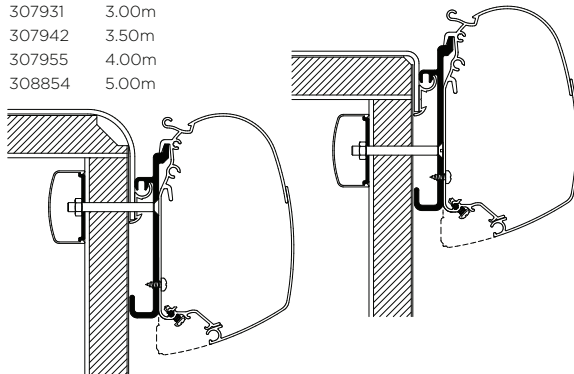307923 Set: 2x 18cm + 1x 1m - Serie 7  
307911 Set: 2x 18cm + 2x 8cm - Serie 9  
307931 3.00m  
307942 3.50m  
307955 4.00m  
308854 5.00m




Fits Thule Omnistor Awnings:  
8000 / 5200 / 4900

### Le Voyageur




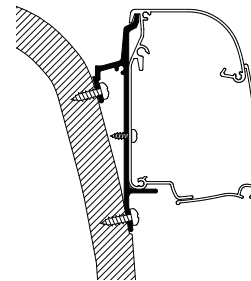307953 4.00m




Fits Thule Omnistor Awnings:  
8000 / 4900

### Swift Rio









307028 Set: 1x 17.5cm + 1x 4cm + 1x 40cm

**New**

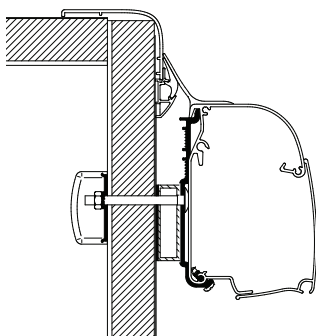







Fits Thule Omnistor Awnings:  
5200 / 4900

# Adapters for wall mounted awnings

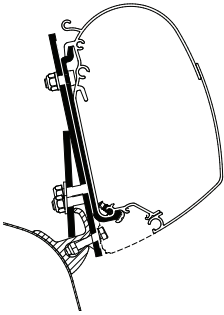
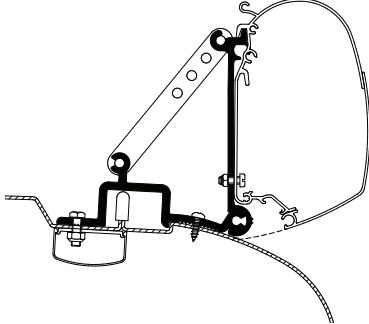
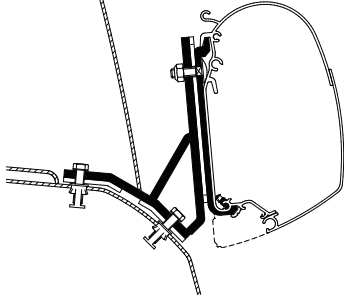
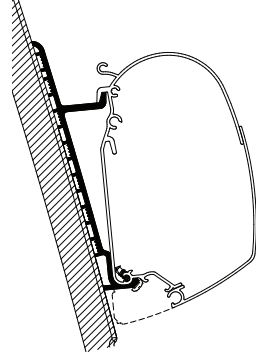
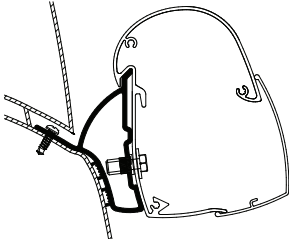
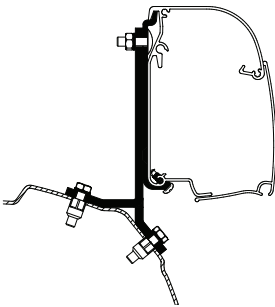
VAN	
<p><b>Brandrup Rail</b></p> <p>307886 Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>	<p><b>Ducato - Jumper - Boxer ≤ 2006</b></p> <p>307913 Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 2000</p>
<p><b>Ducato - Iveco H1/H2 Lift Roof</b></p> <p>308960 Set: 3x 17.5cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p><b>Ducato H3 + EPDM</b></p> <p>309999 Set: 2x 50cm + 1x 10cm</p>  <p><b>New</b></p> <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>
<p><b>Ducato H1</b></p> <p>308659 Set: 2x 12cm</p>  <p>Fits Thule Omnistor Awning: 5102</p>	<p><b>Ford Transit/Tourneo Custom</b></p> <p>309980 Set: 2x 8cm - RHD (UK) 309981 Set: 2x 8cm - LHD (EU) Combination with Lift Roof possible</p>  <p><b>New</b></p> <p>Fits Thule Omnistor Awning: 4900 (2.60m length)</p>



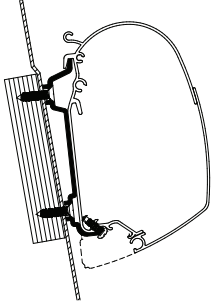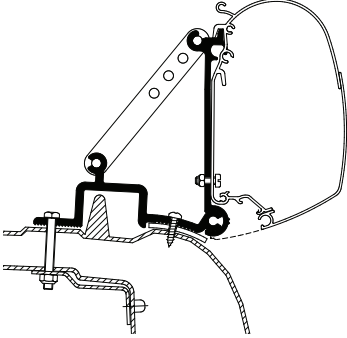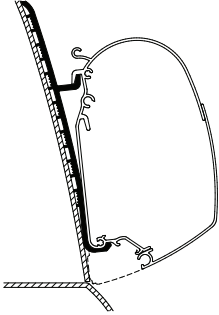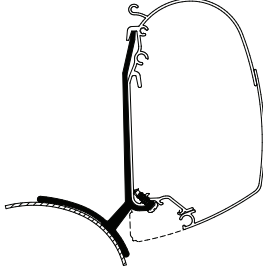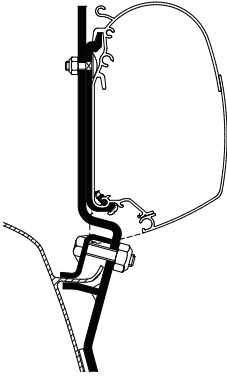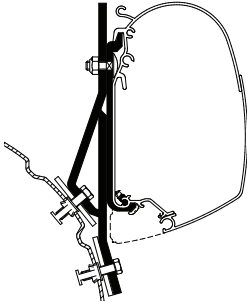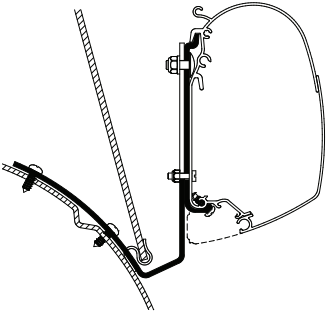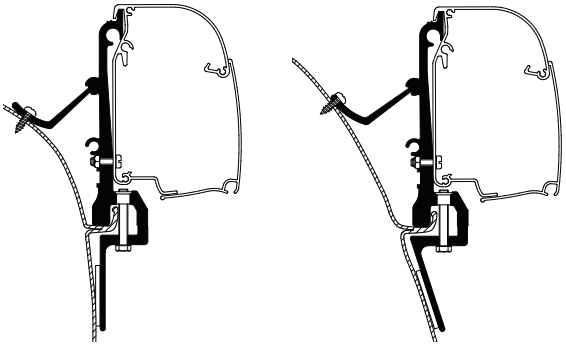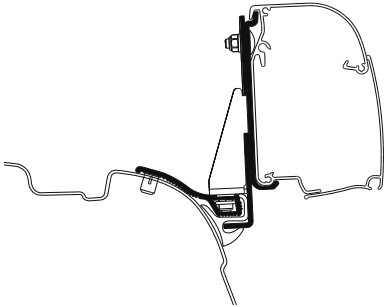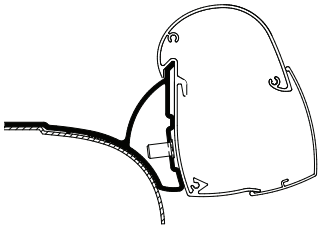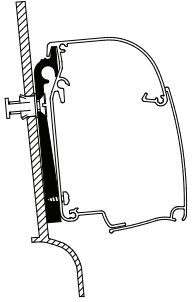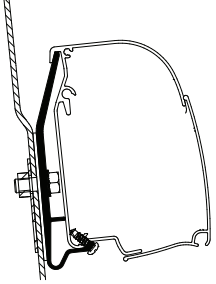
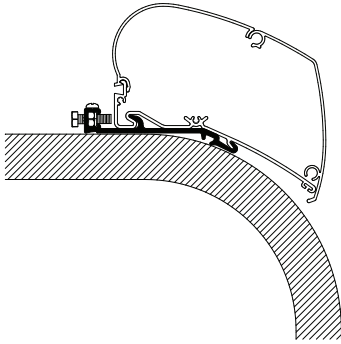

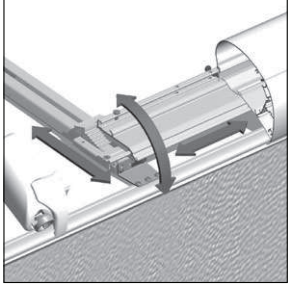

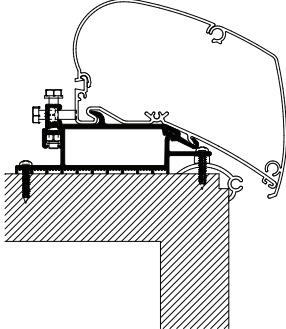
# Adapters for wall mounted awnings

VAN	
<p><b>Ford Transit High Roof</b></p> <p>307999 Set: 2x 50cm + 1x 50cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Renault Master 1998-2010</b></p> <p>307918 Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900 / 2000</p>
<p><b>Renault Master High Roof H3</b></p> <p>308072 Set: 2x 50cm</p>  <p>Fits Thule Omnistor Awnings: 8000 / 5200 / 4900</p>	<p><b>Renault Traffic - Opel Vivaro</b></p> <p>307996 Set: 2x 50cm Also fits Nissan Primastar</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>
<p><b>VW T2 &amp; T3</b></p> <p>307880 Set: 2x 8cm + 1x 4cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p><b>VW T4</b></p> <p>307879 Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>







# Adapters for wall mounted awnings

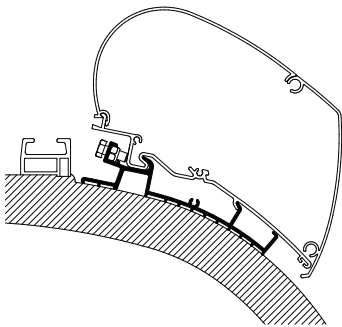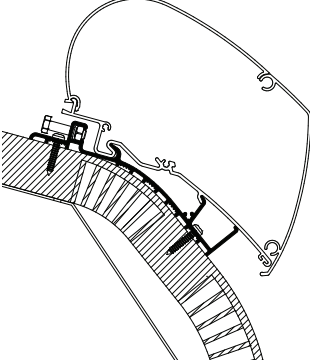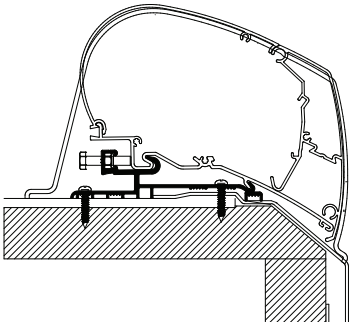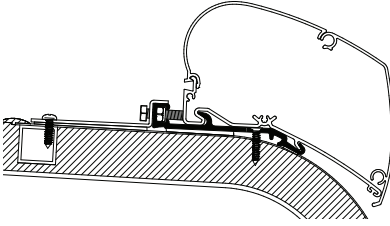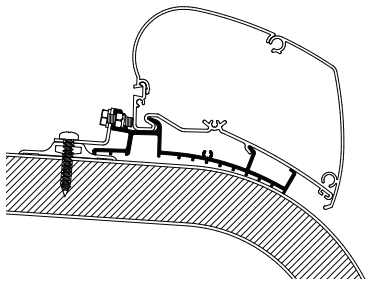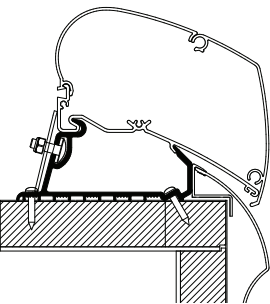VAN	
<p><b>VW T4 Lift Roof</b></p> <p>307887 Set: 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p><b>Van</b></p> <p>307884 Set: 1x 4cm + 2x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900 / 2000</p>
<p><b>VW T5/T6 Reimo Multirail</b></p> <p>Thule Omnistor 4900 Awnings + Adapter and Rain Gutter incl.</p> <p>301410 2.60m ANT 31 - LHD (EU) 301420 3.00m ANT 31 - LHD (EU) 301411 2.60m ANT 31 - RHD (UK) 301421 3.00m ANT 31 - RHD (UK)</p> <p>NOTE: Reimo exclusivity</p> 	<p><b>VW T5/T6</b></p> <p>Thule Omnistor 5102 Awning + Adapter included</p> <p>309851 2.60m ANT 31 309852 2.60m GREY 31</p> 
<p><b>Westfalia Adapter</b></p> <p>308426 Set: 3x 8cm</p>  <p>Fits Thule Omnistor Awnings: 5200 / 4900</p>	<p><b>Westfalia Ford Nugget</b></p> <p>309984 Set: 2x 12cm</p>  <p>Fits Thule Omnistor Awning: 4900 (2.60m length)</p>

# Adapters for roof mounted awnings

UNIVERSAL	
<p><b>Flat Roof</b> </p> <p>308097 3.00m            308098 3.50m            308099 4.00m            308100 5.50m            306799 6.00m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>	<p><b>Installation profiles</b> </p> <p>308054 Set: 2x mounting rails + Adapter            308055 Set: 3x mounting rails + Adapter</p> <p>Awnings ≤ 3.50m: 1x 308054            Awnings 3.75m - 4.50m: 1x 308055            Awnings ≥ 5.00m: 2x 308054</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>
<p><b>Roof Top</b> </p> <p>308299 Set: 2x 27cm + 2x 50cm</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>	

# Adapters for roof mounted awnings


MANUFACTURER MOTORHOME	
<p><b>Carthago Chic &lt; 2014</b></p> <p>309892 3.50m                      309888 4.00m                      309889 4.50m                      309890 5.00m                      309891 5.50m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>	<p><b>Carthago C-Line ≥ 2014</b></p> <p>307250 3.50m                      307251 4.00m                      307252 4.50m                      307253 5.00m                      307254 5.50m                      301439 6.00m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>
<p><b>Concorde</b></p> <p>301415 6.00m</p> <p style="text-align: right;"><b>New</b></p>  <p>Fits Thule Omnistor Awning: 9200</p>	<p><b>Esterel</b></p> <p>308110 4.00m</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>
<p><b>Giottiline</b></p> <p>308107 Set: 2x 10cm + 2x 40cm</p>  <p>Fits Thule Omnistor Awnings 9200 / 6200</p>	<p><b>Hobby Camper 2013</b></p> <p>309976 Set: 2x 27cm + 2x 50 cm</p>  <p>Fits Thule Omnistor Awnings: 9200 / 6200</p>

# Adapters for roof mounted awnings
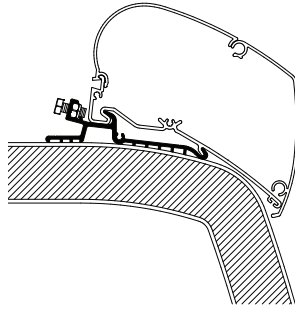
## MANUFACTURER MOTORHOME

### Hymer SX


308087	3.50m
308088	4.00m
308089	4.50m
308090	5.00m
308091	5.50m
306800	6.00m



Fits Thule Omnistor Awnings:  
9200 / 6200

### Hymer 2013

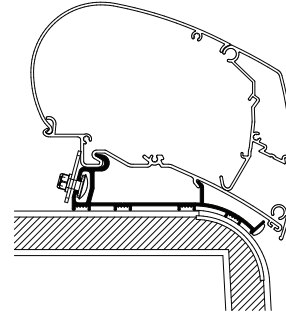306951	3.50m
306952	4.00m
306953	4.50m
306954	5.00m
306955	5.50m
306956	6.00m





Fits Thule Omnistor Awnings:  
9200 / 6200

### LMC Liberty TI/TEC

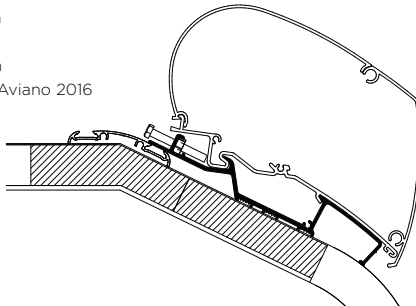307042	3.00m
307043	3.50m
307044	3.75m
307045	4.00m
307046	4.50m
307049	5.00m
307047	5.50m
307048	6.00m


Also fits Bürstner Aviano 2016




Fits Thule Omnistor Awnings:  
9200 / 6200

### Carthago Malibu

308078	3.50m
308079	4.00m
301417	4.50m
301418	5.00m




**New**

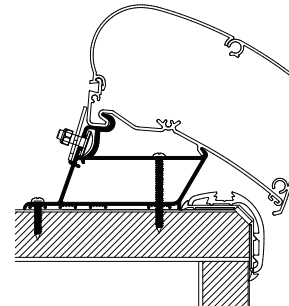


Fits Thule Omnistor Awnings:  
6200

### Niesmann Smove

301423	Motorhome Model 6.9B/Q - 3.00m
301424	Motorhome Model 7.4B/E - 3.50m





**New**

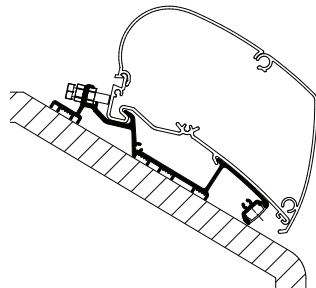

Fits Thule Omnistor Awnings:  
6200



### Rapido Distinction

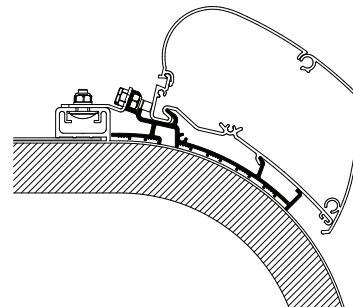309945	4.00m
309944	4.50m



Fits Thule Omnistor Awnings:  
9200 / 6200

# Adapters for roof mounted awnings

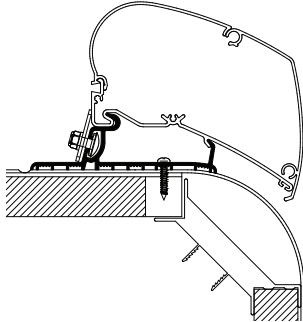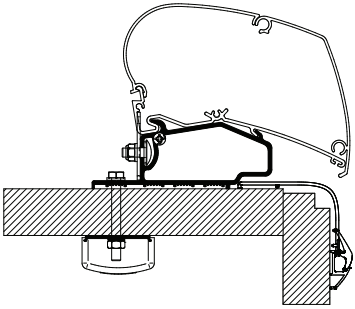MANUFACTURER MOTORHOME	
<p><b>Autosleepers 2013</b></p> <p>306794 3.00m                      306795 3.50m                      306796 4.00m                      306797 5.00m</p>  <p>Fits Thule Omnistor Awnings:                      9200 / 6200</p>	<p><b>Swift Escape 2017</b></p> <p>301412 Model 604/695 - 3.00m awning                      301413 Model 622/614/664/685 - 3.50m awning                      301414 Model 674/684/694 - 4.25m awning</p>  <p>Fits Thule Omnistor Awnings:                      9200 / 6200</p>

**New**

# Adapters for roof mounted awnings

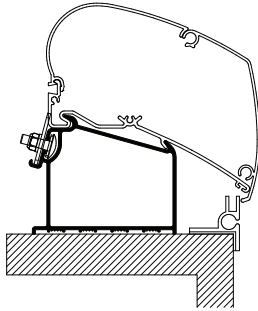
## MANUFACTURER CARAVAN

### Adria Caravan ≥ 2015

309982 Set: 2x 50cm + 2x 27cm




**New**



Fits Thule Omnistor Awnings:  
6200 / 9200

### Caravan

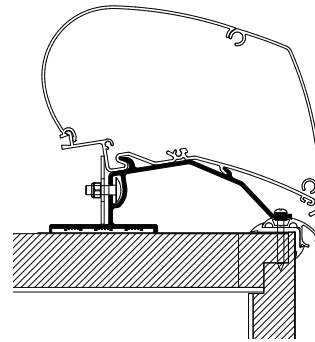306757 Set: 3x 1.00m  
309957 3.00m  
309962 3.25m  
309958 3.50m  
309963 3.75m  
306807 4.00m  
309964 4.25m  
306809 4.50m  
307132 5.00m  
307133 5.50m  
309959 6.00m



Fits Thule Omnistor Awnings on different vehicle brands:  
Fendt, Dethleffs, LMC\*, Trigano : 9200 / 6200  
\*Extra fixation: LMC Caravan Kit 307064


### Eriba Touring > 2008

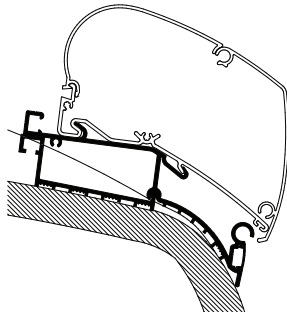Adapter + LED  
307390 2.80m Triton  
306710 3.25m Troll

**NOTE:** Exclusively via Hymer Eriba Touring Dealer




**New**



Fits Thule Omnistor Awning:  
6200

### Fendt Brilliant

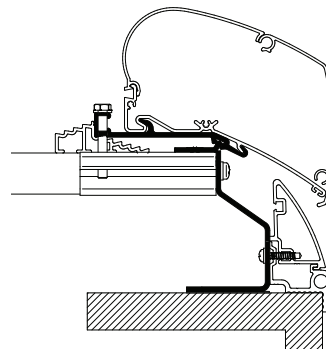
309692 Set: 2x 11.5cm + 1x 27cm + 1x 50cm



Fits Thule Omnistor Awnings:  
9200 / 6200

### Hobby Caravan 2009

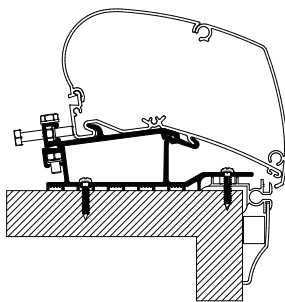
308663 Set: 2x 27cm + 2x 50cm



Fits Thule Omnistor Awnings:  
9200 / 6200

### Hobby Premium & Ontour

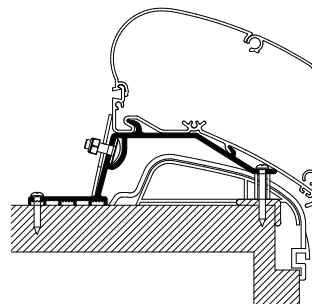309819 Set: 2x 27cm + 2x 50cm




Fits Thule Omnistor Awnings:  
9200 / 6200

# Adapters for roof mounted awnings
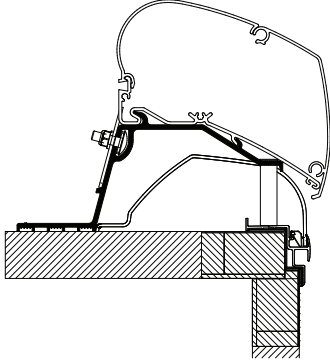
## MANUFACTURER CARAVAN

**Hobby Caravan ≥ 2014**


306948



Fits Thule Omnistor Awnings:  
9200 / 6200

**Hymer 2013 Nova Roof**

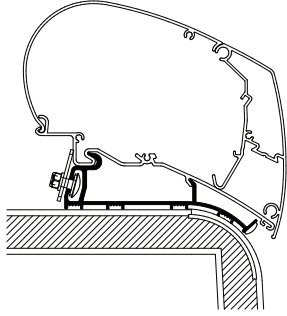
306951	3.50m
306952	4.00m
306953	4.50m
306954	5.00m
306955	5.50m
306956	6.00m



Fits Thule Omnistor Awnings:  
9200 / 6200

**LMC Caravan Roof Adapter Kit**






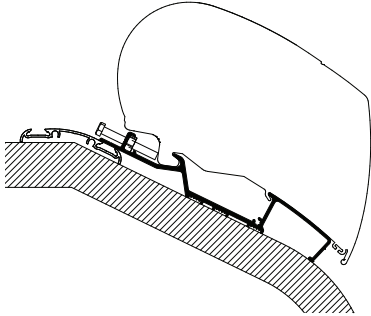
307064



Fits Thule Omnistor Awnings:  
9200 / 6200



# Adapters for vans

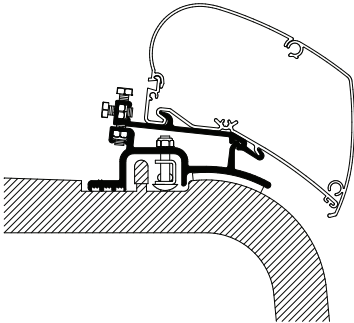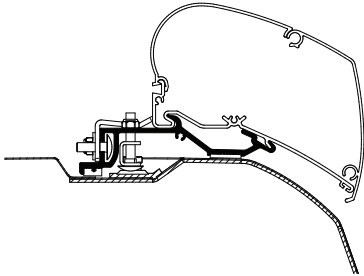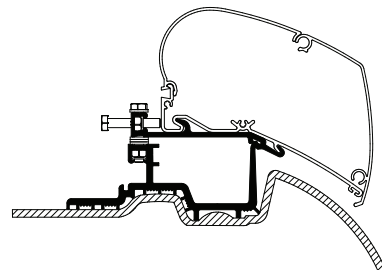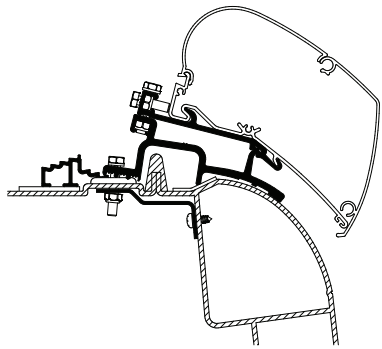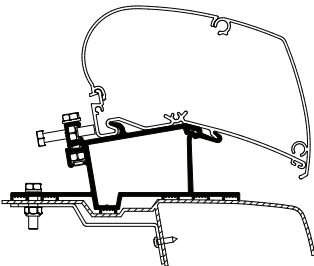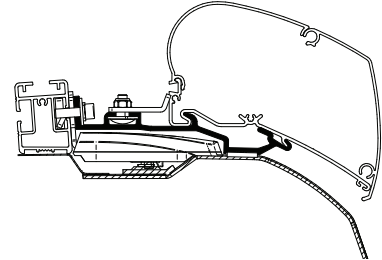










VAN	
<p><b>Ducato - Jumper - Boxer</b> <b>1994-2006</b></p> <p>Adapter + EPDM 308058</p>  <p>Fits Thule Omnistor Awning: 6200</p>	<p><b>Ducato - Jumper - Boxer</b> <b>≥ 2007</b></p> <p>Adapter + EPDM + adapter covers</p> <p>301649 L2H2 3.25m 301650 L3H2 3.75m / L4H2 4.00m</p>  <p>Fits Thule Omnistor Awning: 6200</p>
<p><b>Mercedes Sprinter &gt;2007</b> <b>VW Crafter 2007-2016</b></p> <p>308073</p>  <p>Fits Thule Omnistor Awning: 6200</p>	<p><b>Renault Master - Opel Movano</b> <b>1998-2010</b></p> <p>308059</p>  <p>Fits Thule Omnistor Awning: 6200</p>
<p><b>Renault Master - Opel Movano</b> <b>≥ 2011</b></p> <p>308959</p>  <p>Fits Thule Omnistor Awning: 6200</p>	<p><b>Adapter Roof Rack Ducato - Jumper - Boxer H2</b></p> <p>Adapter + EPDM + adapter covers</p> <p>301651 Ducato L2H2 301652 Ducato L3H2 / L4H2</p>  <p>Fits Thule Omnistor Awning: 6200</p>

# Adapters for vans

Fiat Ducato – Peugeot Boxer – Citroën Jumper				
	C	M	L	XL
	L1 (4963mm)	L2 (5413mm)	L3 (5998mm)	L4 (6363mm)
H1 (2254mm)	<p>Wall awning 2.60m - 308960</p>	<p>Wall awning 3.00m - 308960</p>		
H2 (2524mm)	<p>- Roof awning 2.60m - 301649 - Wall awning 2.60m (Ducato H2 Lift Roof) - 308960</p>	<p>- Roof awning 3.25m - 301649 - Wall awning 3.25m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301651</p>	<p>- Roof awning 3.75m - 301650 - Wall awning 3.75m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>	<p>- Roof awning 4.00m - 301650 - Wall awning 4.00m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>
H3 (2764mm)	<p>wheel base 3000 awning length 2.60m</p>	<p>wheel base 3450 awning length 3.00 - 3.25m</p>	<p>wheel base 4035 awning length 3.50m - 3.75m</p>	<p>wheel base 4035 XL awning length 4.00m</p>



# Adapters for vans

		Mercedes Sprinter - VW Crafter			
		C	M	L	XL
		L1 (5245mm)	L2 (5910mm)	L3 (6945mm)	L4 (7345mm)
H1 (2435-2530mm)					
H2 (2720-2820mm)					
H3 (3045-3055mm)					
	wheel base 3250	wheel base 3665	wheel base 4325	wheel base 4325 XL	
			Roof awning 3,25m - 308073	Roof awning 3,75m - 308073	Roof awning 4,00m - 308073

**NOTE : Adapter 308073 is not compatible with VW Crafter models as from 2017**